DALI PS



DALI Bus Power Supply Unit

DALI-line power supply

Art. Nr. 24033444



DA-

e

DALI PS Bus Power Supply

Overview

- DALI bus power supply unit
- guaranteed Supply Current 220mA
- maximum Supply Current 250mA
- suitable to power an entire DALI-line with 64 standard DALI ballasts
- suitable for dinrail mounting
- power supply range 120Vac ... 240Vac for worldwide use
- surge immunity up to 400V

- Ioad indicator
- integrated test button for function check
- system status queries (DALI current, bus load, runtime etc.) with DALI-Cockpit Software



Specification, Characteristics

type	DALI PS
article number	24033444

input: L, N

mains power supply		
L, N		
120Vac 240Vac		
40mA (@120Vac), 20mA (@240Vac)		
50Hz / 60Hz		
5,3W		
250ms		

output: DA+, DA-


DALI Supply DA+, DA- 12Vdc 20,5Vdc
,
12Vdc 20,5Vdc
250mA
220mA
250mA
yes
yes
yes
-

insulation data:


impulse voltage category	II
pollution degree	2
rated insulation voltage	250V
rated impulse withstanding voltage	4kV
insulation DALI / mains	reinforced isolation

Insulation test voltage DALI / mains	3000V a.c.
enviromental conditions:	
storing and transportation temperature	-20°C +75°C
operational ambient temperature	-20°C +55°C
rel. humidity, none condensing	15% 90%
general data:	
dimensions (I x w x h)	98mm x 17,5mm x 56mm
mounting	dinrail
rated maximum temperature tc	75°C
expected life time @tc	50.000 h
protection class	II in intended use
protection degree housing	IP40
protection degree terminals	IP20
terminals:	
connection type	screw connector
wire size solid core	0,5 2,5 mm ² (AWG 20 AWG 14)
wire size fine wired	0,5 2,5 mm ² (AWG 20AWG 14)
wire size using wire end ferrule	0,25 1,5 mm ²
stripping length	7 mm / 0,27 inch
locking torque	0,5 Nm
release of wire	open screw
	·
standards:	
DALI	EN 62386-101:2014
EMC	EN 61547
	EN50015 / IEC CISPR15

safety	EN 61347-2-11
	EN 61347-1
markings	DALI-2, CE, ENEC, cURus
UL file number	E495951

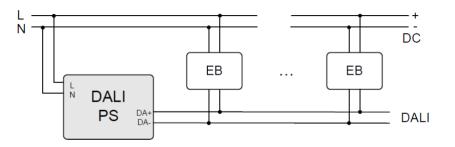

wiring diagram

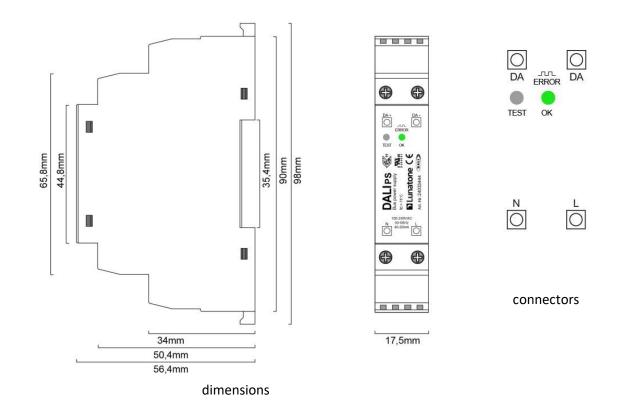

Installation

- The DALI PS is intended for dinrail mounting
- Ensure protection against electric shock by an appropriate enclosure
- Wiring as fixed installation in a dry and clean environment
- Installation only by qualified person when no voltage is applied
- Attend regulations regarding electrical installations of national authorities
- connect power supply terminals L and N to mains voltage
- the polarity of the output voltage is marked on the housing (DA+, DA-)
- The DALI-line may be installed within the same cable or as single conductors within the same tube as mains supply

- The DALI-line must not be connected to the mains or other extra low voltage systems
- DALI-line wiring with standard low voltage installation material
- Wiring topology of the DALI-line: Line, Tree, Star
- Wiring check by pressing the test button: the green led is flashing and all luminaires connected to the DALI system will be controlled by a test sequence (on, off, dimming). To quit the test mode press the test button again.



HINT: The DALI-signal is not classified as SELV circuit. Therefore the standards for installation in low voltage system apply.



The voltage drop on the DALI-line shall not exceed 2V.

• Don't use standard DC power supplies on the DALI-line, since they do not meet the requirements for DALI communication



HINT: an improper DALI power supply can cause damage on DALI devices!

0001	Device Info					
000	Name DALI PS	Article Number 24033444	Update			
0 0	Manufacturer Lunatone	Serial Number 12577 F	irmware Ver 2.2			
	DALI Device Type N/A	Short Address A0 ²	Set			
	Member Of Groups					
e e e	0 1 2 3 4	5 6 7 8 9 10 11 12	13 14 15			
DALIPS во роке зару DLunatone л. н. н. залзан ССЕ	16 17 18 19 20 2	21 22 23 24 25 26 27 28	29 30 31			
	Statistics					
	Total Runtime: 4 minutes					
000	Actual On Time:		4 minutes			
0 0	Power On cycles:	24 Average Bus Current (1min):	36 mA			
areas a	Bus Failures:	9 Average Bus Load (1min):	2 %			
	Test Sequences Executed:	1				
	Power up					
	Sende Befehl	Delay; 0.5 s				
	All (DALI Broadcast 👻	▼				
	RECALL MAX					
	Sustana Fail					
	System Fail					
	Sende Befehl	Delay: 0.5 s				
	All (DALI Broadcast 💌					
	RECALL MAX -					

Commissioning

- The DALI power supply is ready for use
- Make sure that the guaranteed supply current exceeds the current consumption of all bus devices
- Status-LED:
 - green: normal operation
 - green flashing: overload/short circuit
- The DALI PS is recognized during the addressing procedure and is shown in the DALI Cockpit. System parameters (bus load, DALI current, runtime etc.) can be read out and the behaviour on system events (power on, return of DALI voltage after a system failure) can be configured.

Purchase Order Information

Art.Nr. 24033444: DALI PS, guaranteed DALI supply current 220mA, din rail

Additional Information and Equipment

DALI-Cockpit – free configuration tool from Lunatone for DALI systems <u>https://www.lunatone.com/en/product/dali-</u> cockpit/

Lunatone DALI products http://www.lunatone.com/en

Lunatone datasheets and manuals http://www.lunatone.com/en/downloads-a-z/

Contact

Technical Support: support@lunatone.com

Requests: sales@lunatone.com



Disclaimer

Subject to change. Information provided without guarantee. The datasheet refers to the current delivery.

The function in installations with other devices must be tested for compatibility in advance.