





## Quick Install Guide

Compact Desktop PoE+ Switch SW-100-04P

### Setting up your switch:

1. Place your new switch in the desired location
2. Attach and plug in power supply
3. Uplink to your network
4. Attach devices via Ethernet cable

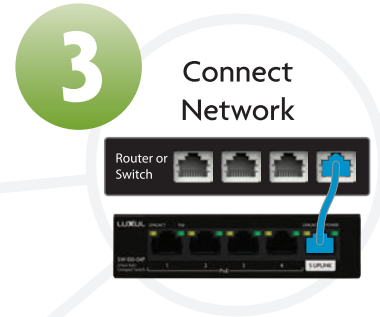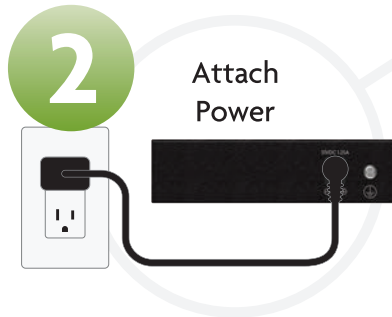



## What if...

### I need to restart my switch?

To restart your switch, unplug it for 5 seconds.



## What do the LEDs on the switch indicate?

Indicator	State	Description
POWER (upper-right corner of port 5)	Solid on	Switch is properly connected to power supply
	Off	Switch is disconnected from or not properly connected to power supply
LINK/ACT (upper-left corners of ports 1-5)	Solid on	Port is connected properly
	Blinking	Data is being transmitted or received over port
	Off	Port is disconnected or not properly connected to a device
PoE (upper-right corners of ports 1-4)	Solid on	Port is powering connected PoE device
	Off	Port is disconnected from or not supplying power to connected device
	Blink once	Power requirement of the device exceeds maximum power output of the port
	Blinking	Total power requirement exceeds maximum power output of the switch/power supply of the connected device is faulty

#### Copyright and Trademark Notices

No part of this document may be modified or adapted in any way, for any purposes without permission in writing from Luxul. The material in this document is subject to change without notice. Luxul reserves the right to make changes to any product to improve reliability, function, or design. No license is granted, either expressly or by implication or otherwise under any Luxul intellectual property rights. An implied license only exists for equipment, circuits and subsystems contained in this or any Luxul product.

© Copyright 2020 Legrand AV Inc. All rights reserved. The name Luxul, the Luxul logo, the Luxul logo mark and Simply Connected are all trademarks and/or registered trademarks of Legrand AV Inc. All other trademarks and registered trademarks are property of their respective holders.

### Technical Support

P: 801-822-5450

E: [support@luxul.com](mailto:support@luxul.com)

For support chat go to:  
[luxul.com](http://luxul.com)

### Sales

P: 801-822-5450

E: [sales@luxul.com](mailto:sales@luxul.com)