



Hall Technologies • 1234 Lakeshore Dr Suite #150 Coppell, TX 75019 • halltechav.com

# HT-CAM-1080PTZ

Full HD PTZ Camera

## User Manual

Version: 1.0








## Attentions


---

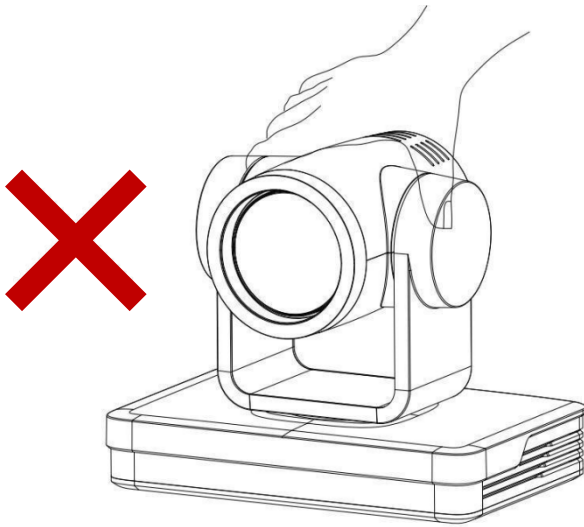
Improper operations may damage the product structure and result in mechanical failure. Please note the following tips:



 Do not move the camera by grabbing the head.

 Move the camera by holding the bottom with one or both hands.

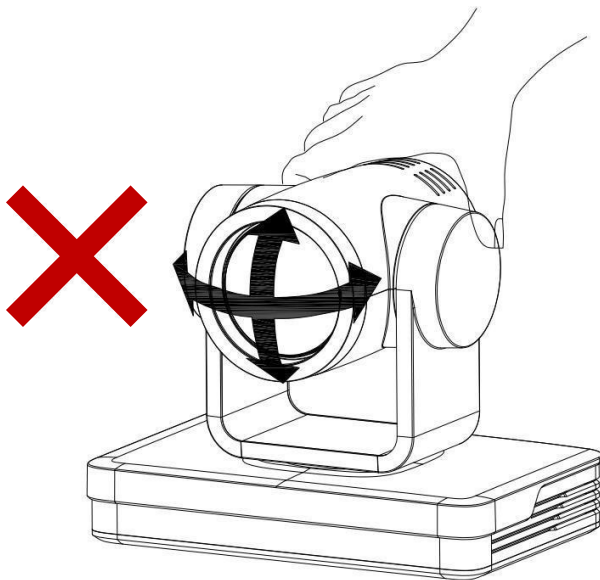

 Do not rotate the lens and holder manually regardless, if the camera is powered on or off. To do so may damage the camera structure and result in the failure of the camera self-check as well as being unable to start the camera.

**This manual introduces functions, installations, and operations for this PTZ camera in detail. Please read this manual carefully before installation and use.**

## 1. Cautions

1.1 Avoid damage to the product caused by heavy pressure, strong vibration, or immersion during transportation, storage, and installation.

1.2 The housing of this product is made of organic materials. Do not expose it to any liquid, gas, or solids which may corrode the shell.

1.3 Do not expose the product to rain or moisture.

1.4 To prevent the risk of electric shock, do not open the case. Installation and maintenance should only be carried out by qualified technicians.


1.5 Do not use the product beyond the specified temperature, humidity, or power supply specifications.

1.6 Wipe it with a soft, dry cloth when cleaning the camera lens. Wipe it gently with a mild detergent if needed. Do not use strong or corrosive detergents to avoid scratching the lens and affecting the image.

1.7 This product contains no parts which can be maintained by users themselves. Any damage caused by dismantling the product by the user without permission is not covered by warranty.

## 2. Electrical Safety

Installation and use of this product must strictly comply with local electrical safety standards. The power supply of the product is 12V, the max electrical current is 2A.

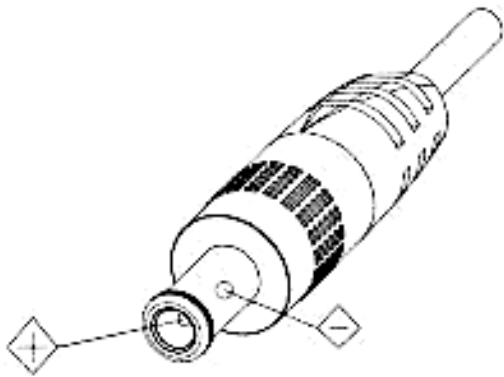

## 3. Install

1.1 Do not rotate the camera head violently, otherwise it may cause mechanical failure.

1.2 This product should be placed on a stable desktop or other horizontal surface. Do not install the product obliquely, otherwise it may display an inclined image.

1.3 Ensure there are no obstacles within rotation range of the holder.

1.4 Do not power on before completing the installation.

## 4. Magnetic Interference

Electromagnetic fields at specific frequencies may affect the video image. This product is Class A. It may cause radio interference in a household application. Appropriate measures are required.

# Table of Contents

HT-CAM-1080PTZ.....	1
<b>1. Camera Installation.....</b>	<b>5</b>
1.1 Camera Interface.....	5
1.2 Interfaces and Connections.....	6
1.3 Mounting Brackets .....	6
<b>2. Product Overview.....</b>	<b>11</b>
2.1 Product Introduction .....	11
2.2 Dimensions .....	12
2.3 Accessories .....	12
2.4 RS-232 Interface .....	13
2.5 Rotary Dial Switch.....	15
2.6 Main Features .....	15
2.7 Specifications .....	17
<b>3. Remote Control.....</b>	<b>20</b>
3.1 Match code for Wireless Remote Control.....	20
3.2 Keys Introduction for IR Remote Control .....	21
3.3 Menu Introduction .....	24
<b>4. Network Configuration.....</b>	<b>25</b>
4.1 Network Connection.....	25
4.2 IE Login.....	26
4.3 Streaming.....	27
4.4 Software Upgrading.....	29
<b>5. Serial Communication Control.....</b>	<b>30</b>
5.1 VISCA Protocol Return Command.....	30
5.2 VISCA Protocol Control Command .....	30
5.3 VISCA Protocol Inquiry Command .....	34
5.4 PELCO-D Protocol Command List .....	36
5.5 PELCO-P Protocol Command List .....	37
<b>6. Maintenance and Troubleshooting .....</b>	<b>38</b>
6.1 Maintenance .....	38
6.2 Troubleshooting.....	38

# 1. Camera Installation

## 1.1 Camera Interface

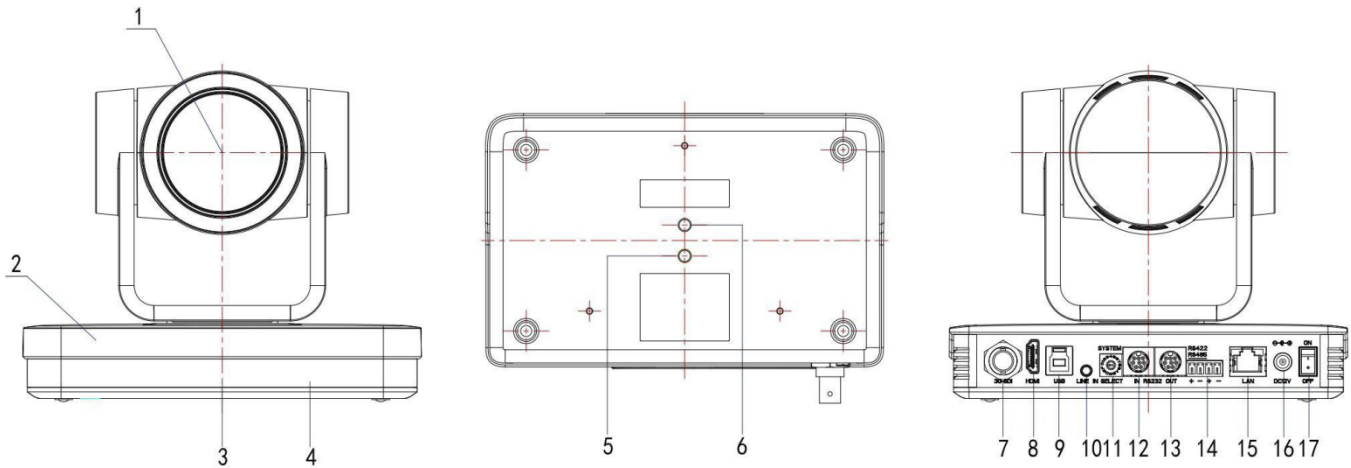


Figure 1.1 Interface of SU (standard) Model

- |                                       |   |
|---------------------------------------|---|
| 1. Camera Lens                        | 10. Audio Input Interface (LINE-IN)       |
| 2. Camera Base                        | 11. Rotary Dial Switch                    |
| 3. Remote Control Receiving Indicator | 12. RS232 Input Interface (input)         |
| 4. Infrared Receiver                  | 13. RS232 Output Interface (Output)       |
| 5. Tripod Screw Hole                  | 14. RS422 Compatible with RS485 Interface |
| 6. Screw Hole for Tripod              | 15. LAN Port                              |
| 7. SDI Output Interface               | 16. Power Input Socket (DC12V)            |
| 8. HDMI                               | 17. Power Switch Button                   |
| 9. U3                                 |   |

## 1.2 Interfaces and Connections

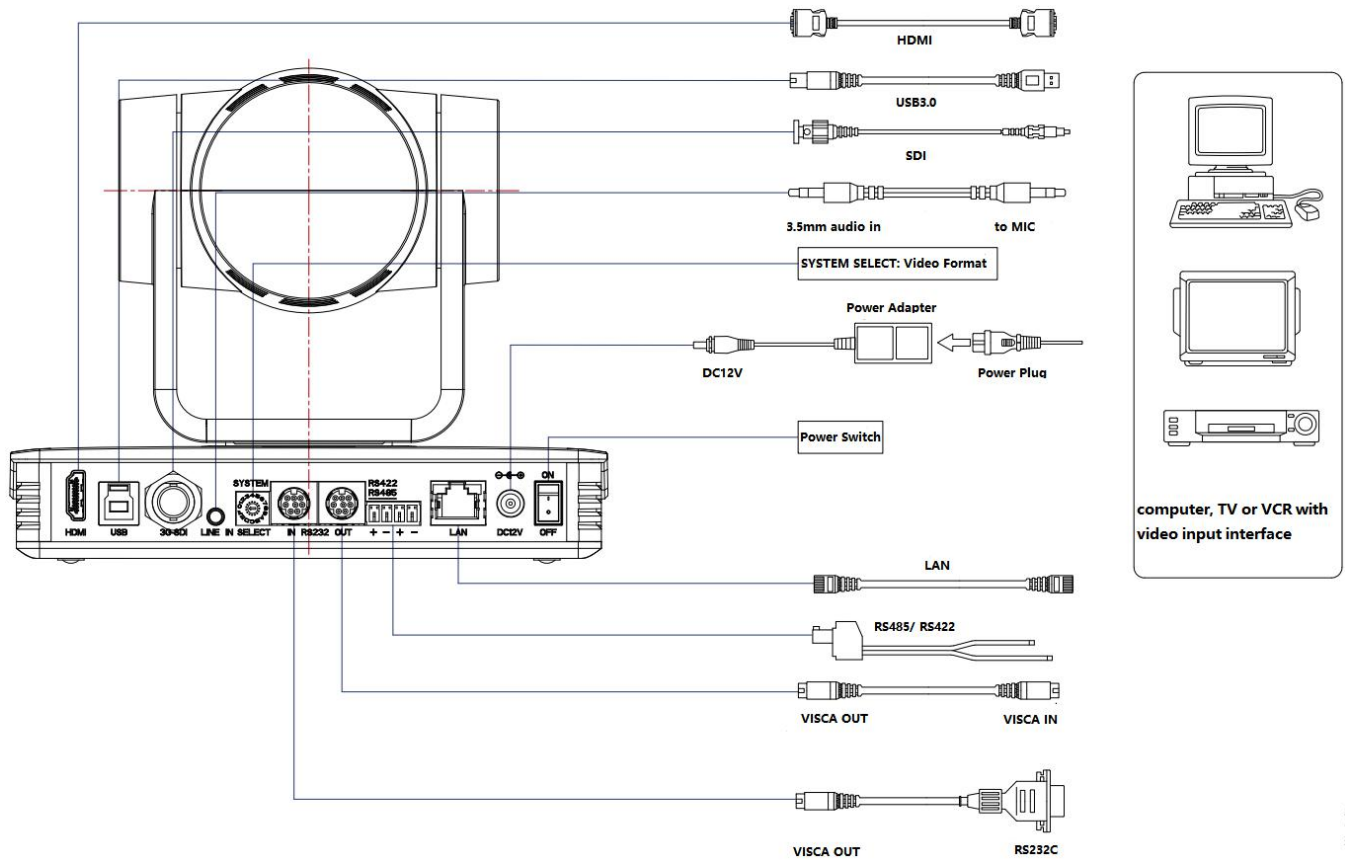


Figure 1.3 Wiring Diagram




1. After power on and self-check, the camera will automatically return to the preset 0 position if it's presets have been set.
2. The default address for the IR remote control is 1#.  
If the menu is restored to factory defaults, the remote-control default address will restore to 1#.

## 1.3 Mounting Brackets


Notes:

Ceiling or wall mounting brackets can only be mounted on the template and concrete wall. For safety reason, plasterboard is not recommended.


# 1. Wall Mounting

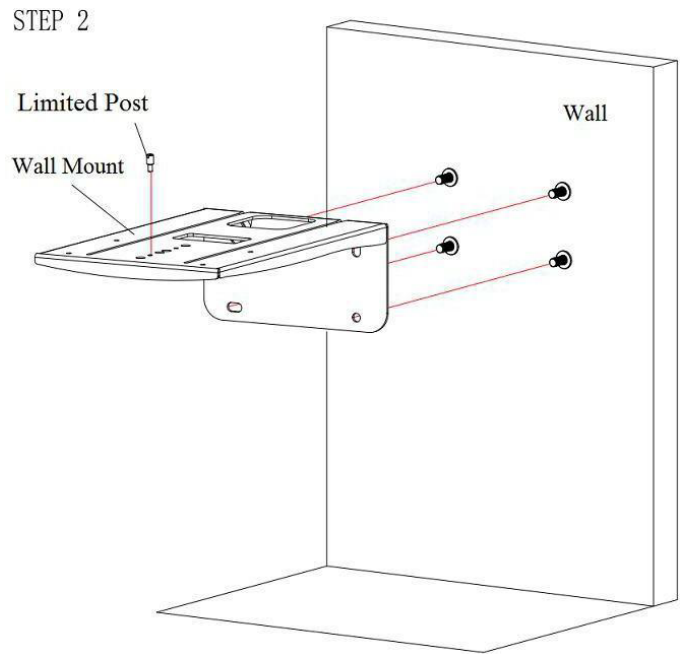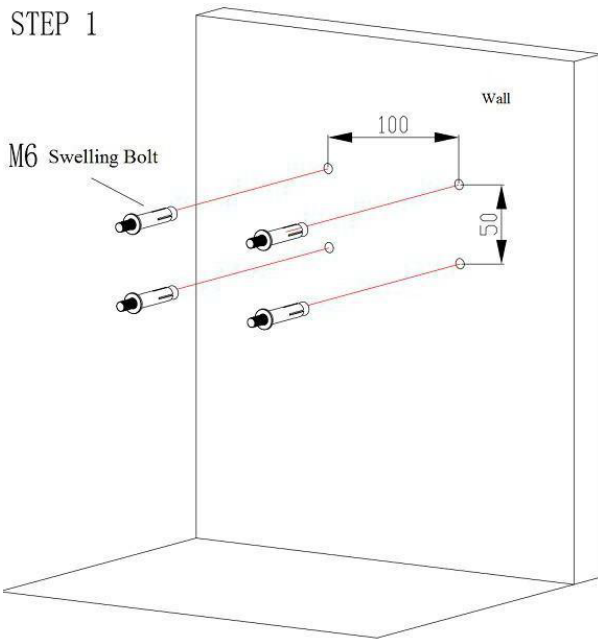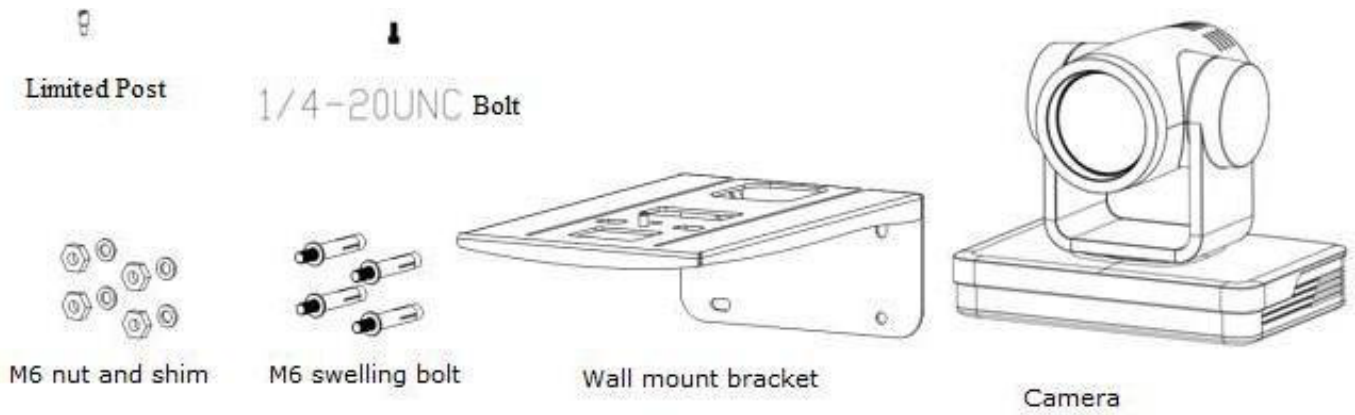


STEP 3

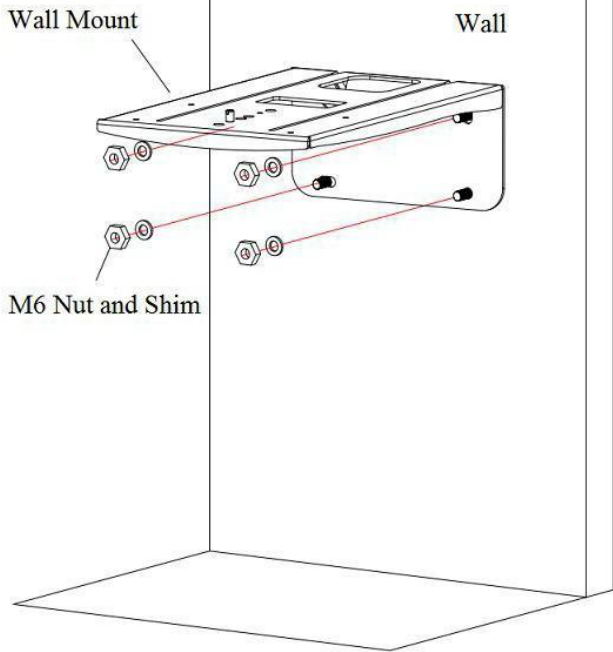

STEP 4

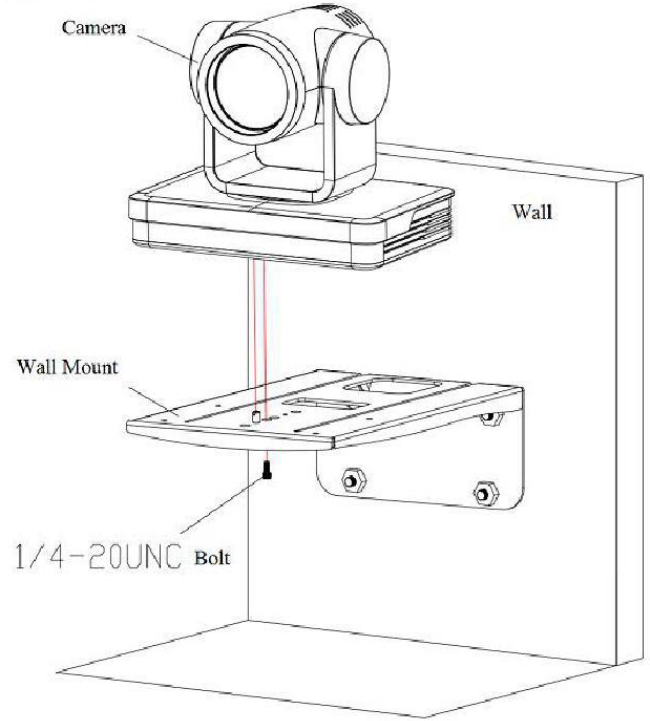


STEP 5

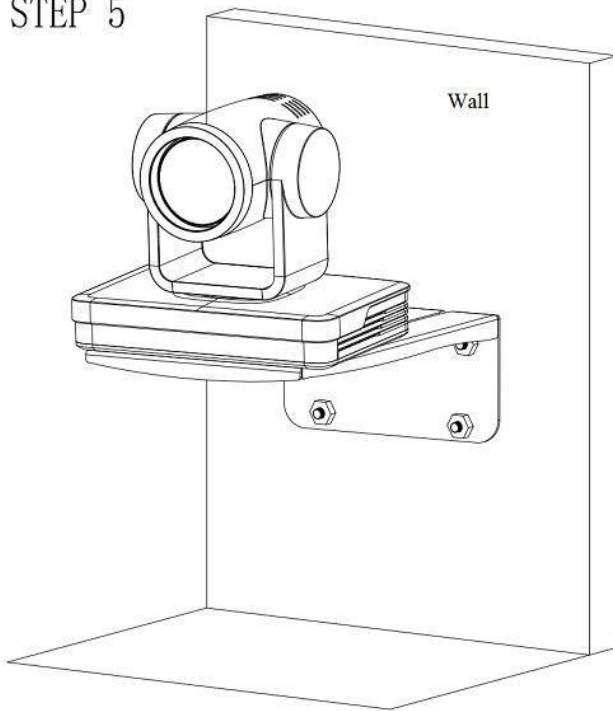





## 2. Ceiling Mounting

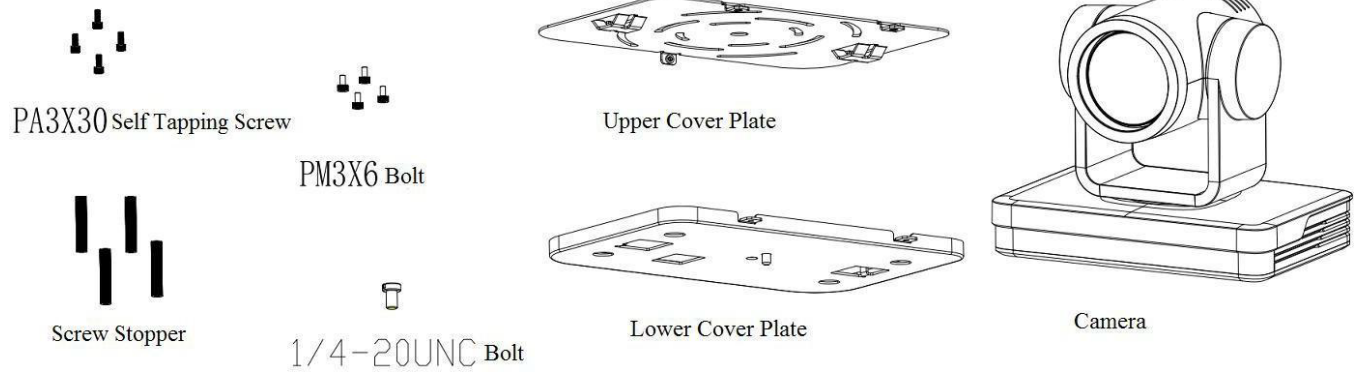


### STEP 1

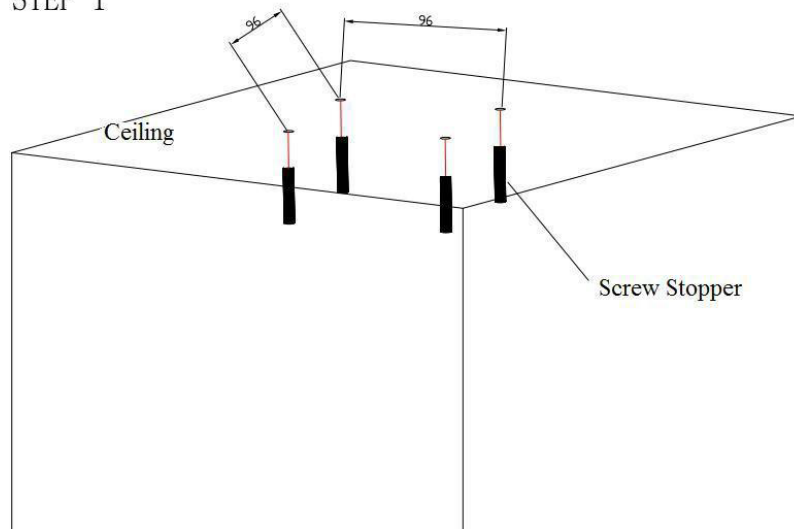


### STEP 2

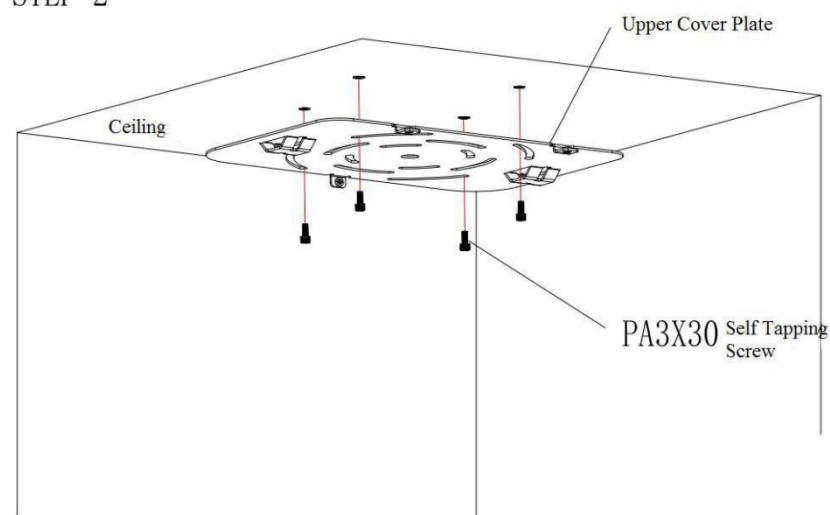


STEP 3

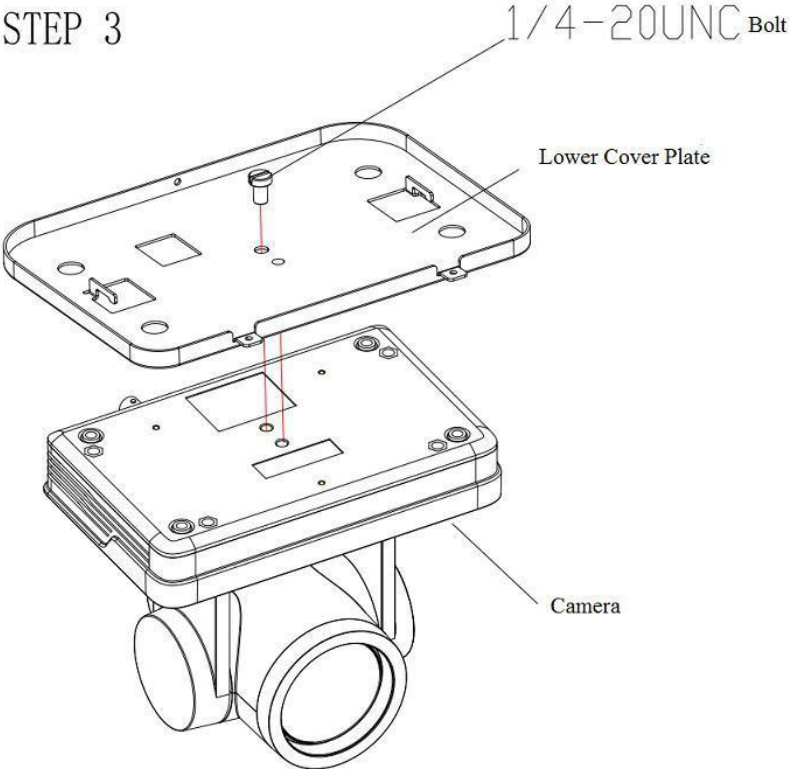

STEP 4

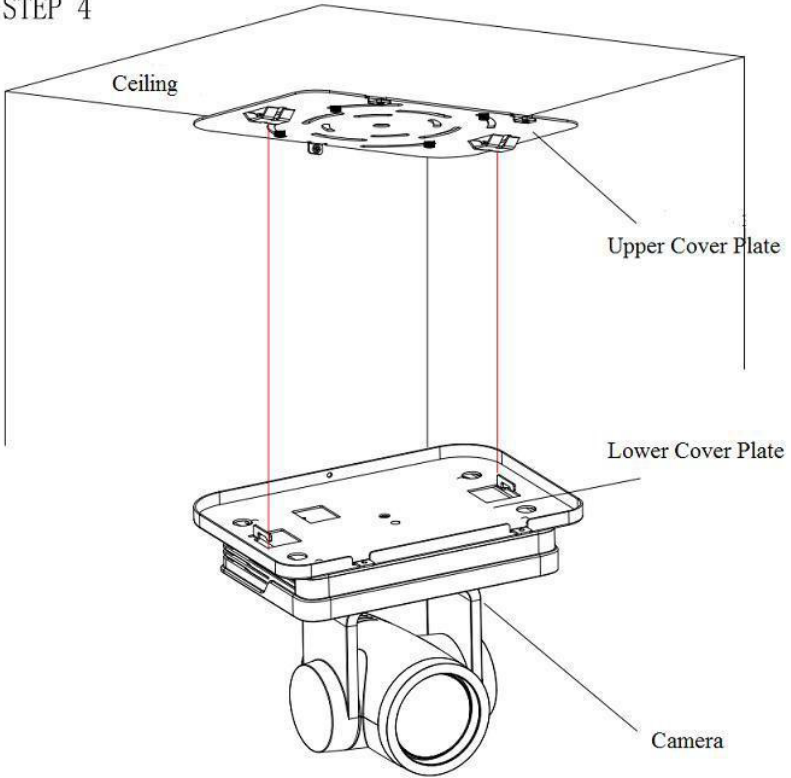

## STEP 5

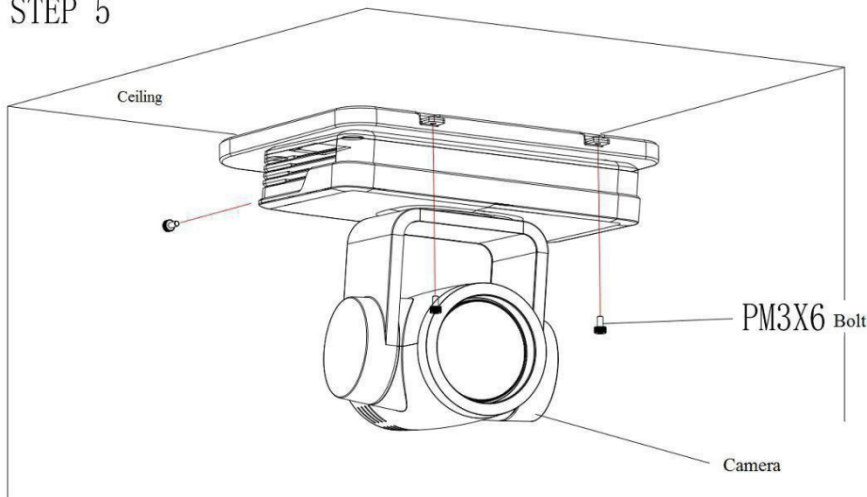

## 2. Product Overview

---

### 2.1 Product Introduction

**Model No. -XX-XX**

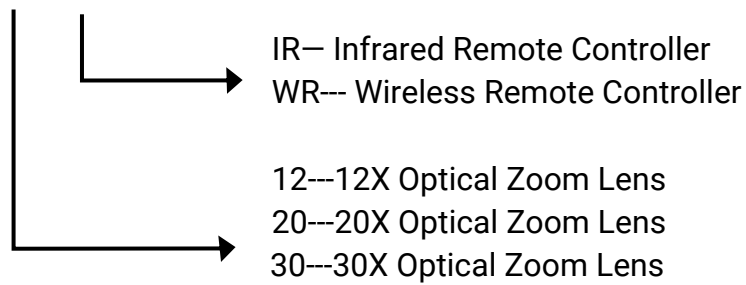


Figure 2.1 Product Model

Users are requested to confirm the model number before referring to product functions accordingly.

## 2.2 Dimensions

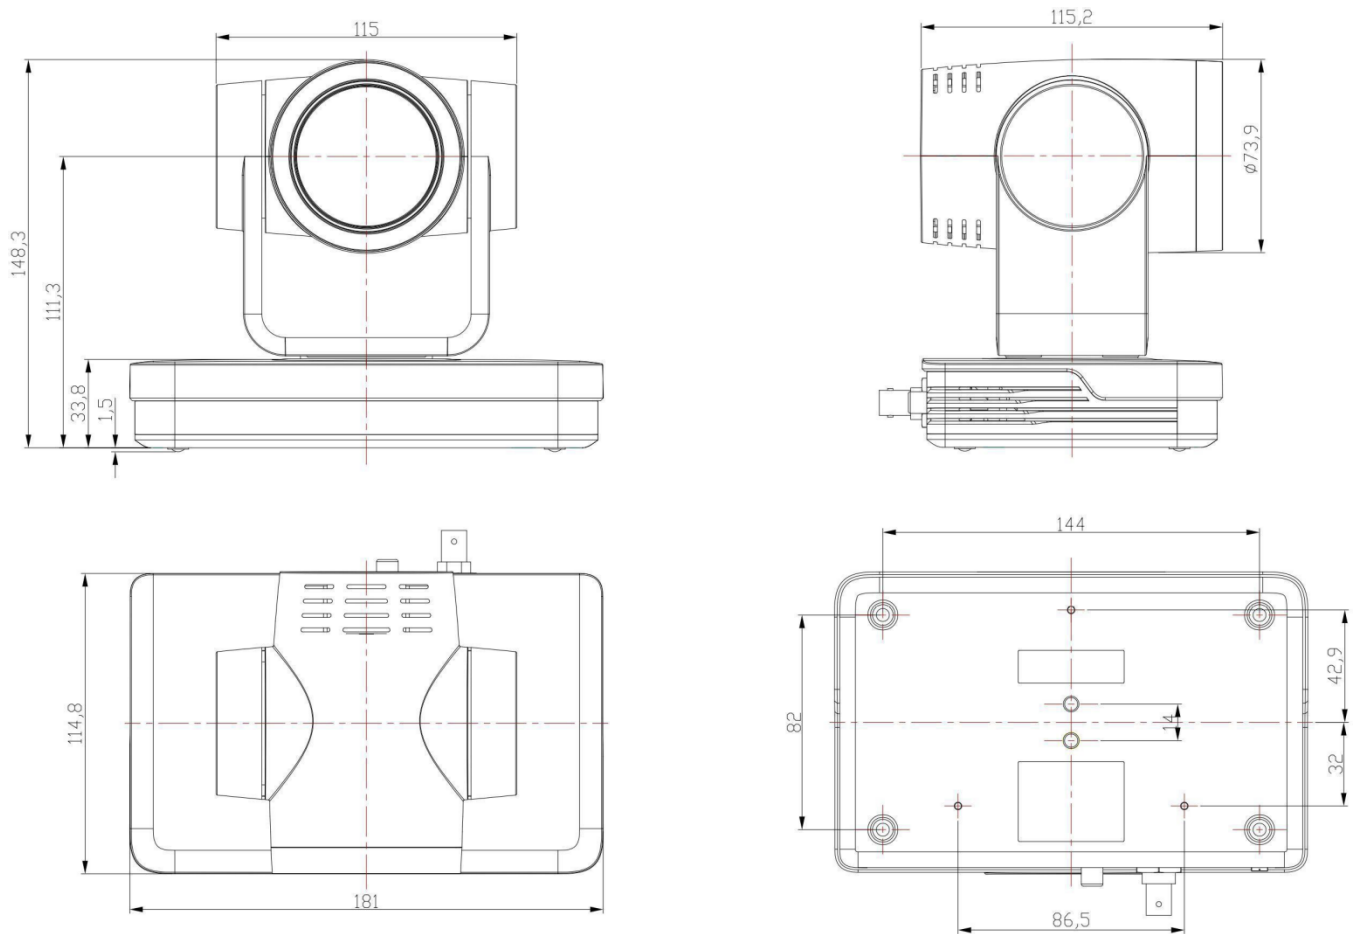


Figure 2.2 Product Dimensions

## 2.3 Accessories

Please check below standard and optional accessories when unpacking the box.

### Standard Accessories


- Power Adapter
- RS-232 Cable
- User Manual
- USB3.0 Cable (only for model with USB3.0 output)
- Warranty Card

### Optional Accessories

- Wireless Remote Control
- Ceiling Mount
- Wall Mount
- Infrared Remote Control


## 2.4 RS-232 Interface

### 1. RS-232 Interface Definition

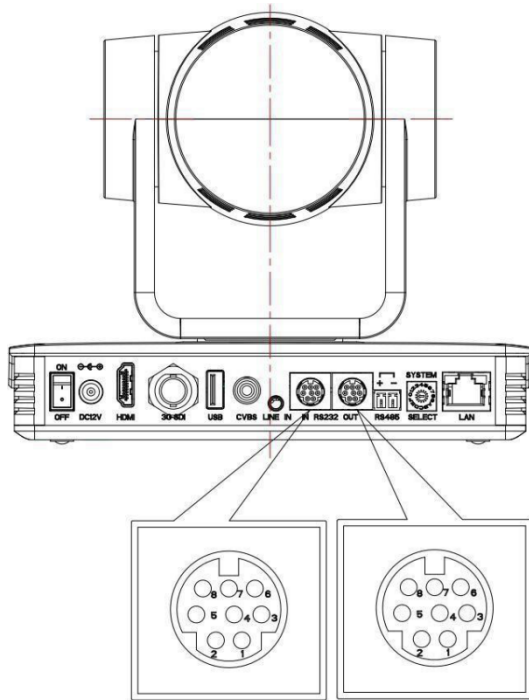


Connection to PC or Camera Controller


Camera	WindowsDB-9
1.DTR	1. DCD
2.DSR	2. RXD
3.TXD	3. TXD
4.GND	4. DTR
5.RXD	5. GND
6.GND	6. DSR
7.IR OUT	7. RTS
8.NC	8. CTS
	9. RI

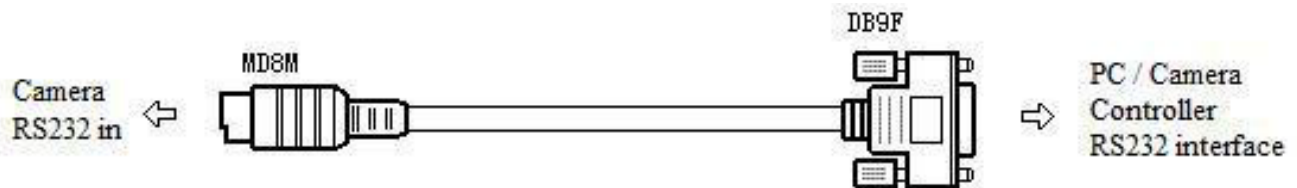

### 2. RS-232 Mini-DIN 8-pin: Port Definition


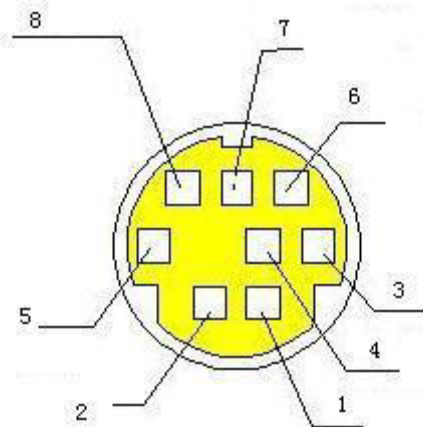


NO.	Port	Definition
1	DTR	Data Terminal Ready
2	DSR	Data Set Ready
3	TXD	Transmit Data
4	GND	Signal Ground
5	RXD	Receive Data
6	GND	Signal Ground
7	IR OUT	IR Commander Signal
8	NC	No Connection

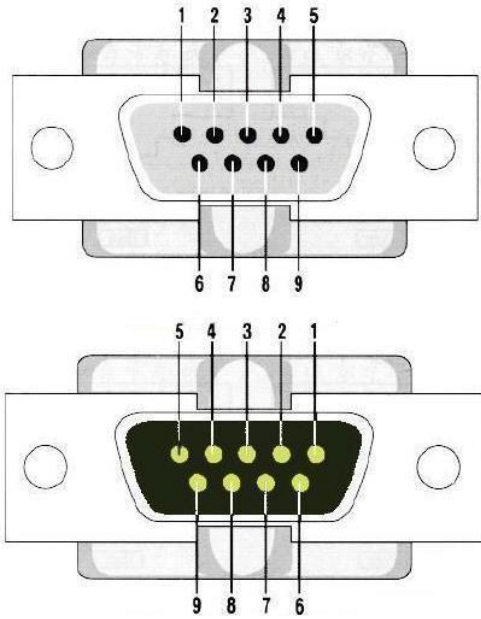


NO.	Port	Definition
1	DCD	Data Carrier Detect
2	RXD	Receive Data
3	TXD	Transmit Data
4	DTR	Data Terminal Ready
5	GND	System Ground
6	DSR	Data Set Ready
7	RTS	Request to Send
8	CTS	Clear to Send
9	RI	Ring Indicator

4. VISCA Networking as shown below:

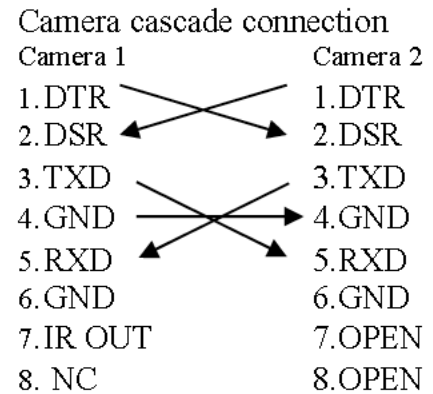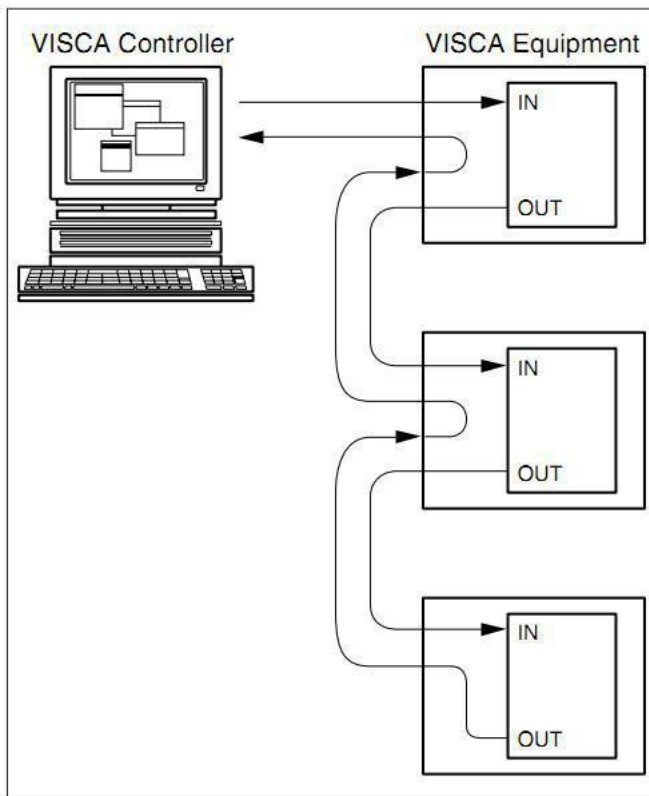

## 2.5 Rotary Dial Switch

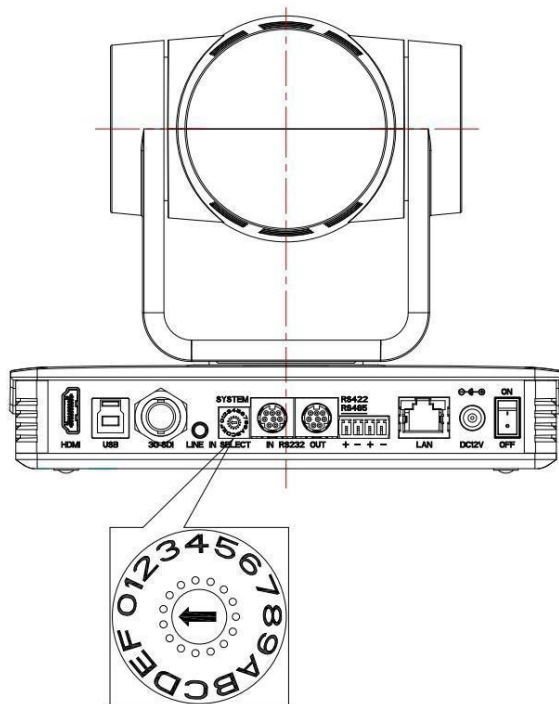

0: Video Format 1080P60  
1: Video Format 1080P50  
2: Video Format 1080P30  
3: Video Format 1080P25  
4: Video Format 720P60  
5: Video Format 720P50  
6: Video Format 1080P59.94  
7: Video Format 1080P29.97

8: Video Format 720P59.94  
9: ----  
A: ----  
B: ----  
C: ----  
D: ----  
E: ----  
F: ----

Note: After turning the dial to modify the video format, power off and restart the unit to take effect.

After turning the dial to F, power off and restart, the menu can display the video format.

## 2.6 Main Features

This series camera has perfect functions, superior performance, and rich video output interfaces, featuring with advanced ISP processing algorithms, offering vivid and high-resolution video with a strong sense of depth and fantastic colour rendition. It supports H.264/H.265 encoding which makes motion video more fluent and clearer under low bandwidth conditions.

- Full HD Resolution: 1/2.8-inch-high quality CMOS sensor. Resolution is up to 1920x1080 with frame rate up to 60 fps.
- Multiple Optical Zoom Lens: 12X/20X/30X optical zoom lens.
- Leading Auto Focus Technology: Fast, accurate and stable auto focusing technology.
- Low Noise and High SNR: Super high SNR image is achieved with low noise CMOS. Advanced 2D/3D noise reduction technology further reduces the noise while ensuring high image clarity.
- Multiple video output interfaces: HDMI, SDI, CVBS, LAN.

- Simultaneously output audio and video signal via HDMI, SDI and LAN. LAN interface supports POE, USB 3.0 supports dual code stream, SDI supports transmission up to 100m under 1080P60 format
- Multiple Audio/Video Compression Standards: Support H.264/H.265 video compression, up to 1920 1080 resolution 60 fps; support AAC, MP3 and G.711A audio compression, 8000、16000、32000、44100、48000 sampling frequency
- USB3.0 Supports Dual Coding Stream: Supports mainstream and sub -stream, and simultaneous output; support YUY2, MJPEG, H.264, NV12, H.265 video coding format
- Built-in Gravity Sensor: supports PTZ auto-flip function and easy installation.
- Multiple Network Protocol: supports ONVIF、GB/T28181、RTSP、RTMP、VISCA OVER IP、IP VISCA、RTMPS、SRT protocols; Supports RTMP push mode making it easy to be connected to streaming server (Wowza、FMS); Supports RTP multicast mode.
- Control Interface: RS422 is compatible with RS485, RS232-IN, RS232-OUT, and the RS232interface supports cascading.
- Multiple Control Protocol: Supports VISCA、PELCO-D、PELCO-P protocols; Supports automatic identification protocols.
- Quiet Pan / Tilt Movement: with high accuracy step driving motor, camera can pan / tilt extremely quietly and smoothly.
- Various remote controls: Users can choose infrared remote control or wireless remote control according to the environmental conditions used. The 2.4G wireless remote control is not affected by angle, distance, and infrared interference. Support the remote-control signal transparent transmission function, which is convenient for back-end equipment to use.
- Multiple Application: Online-education, Lecture Capture, Webcasting, Video conferencing, Tele-medicine, Unified Communication, Emergency command and control systems, etc.



## 2.7 Specifications

Camera Parameter			
Parameter/Model	12X	20X	30X
<b>Focus</b>	3.9 -- 46.8mm	5.2 -- 98mm	4.3 -- 129mm
<b>FOV</b>	6.3° (N) 72.5° (W)	3.2° (N) 56° (W)	2.34°(N) 65°(W)
<b>Aperture Value</b>	F1.8 -- F2.4	F1.5 -- F3.0	F1.6 -- F4.7
<b>Effective Pixels</b>	2.07, 1/2.8-inch high-quality CMOS sensor		
<b>Video Format</b>	<p><b>HDMI/SDI:</b> 1080P60, 1080P50, 1080P30, 1080P25, 720P60, 720P50, 1080P59.94, 1080P29.97, 720P59.94;</p> <p><b>USB3.0: main stream:</b> YUY2/NV12: 1920×1080/1280×720/1024×576/800×600/800×448/640×360/640×480/480×270/320×180@30/25/20/15/10/5fps;</p> <p>MJPEG/H264: 1920×1080/1600×896/1280×720/1024×576/960×540/800×600/800×448/720×576/720</p>		
	<p>×480/640×360/640×480/480×270/352×288/320×240@30/25/20/15/10/5fps;</p> <p>Sub-stream: YUY2/NV12: 1920×1080/1280×720/1024×576/800×600/800×448/640×360/640×480/480×270/320×180@30/25/20/15/10/5fps;</p> <p>MJPEG/H264: 1920×1080/1600×896/1280×720/1024×576/960×540/800×600/800×448/720×576/720</p> <p>×480/640×360/640×480/480×270/352×288/320×240@30/25/20/15/10/5fps;</p>		
<b>Minimum illumination</b>	0.5Lux(F1.8, AGC ON)		
<b>DNR</b>	2D & 3D		
<b>AWB</b>	Automatic, manual, one-key white balance, specified color temperature		
<b>Focus mode</b>	Automatic, manual, one-key focus		
<b>Exposure mode</b>	Auto, manual, shutter priority, aperture priority, brightness priority		
<b>Iris value</b>	F1.8 -- F11、CLOSE		
<b>Shutter Speed</b>	1/25 -- 1/10000		

<b>BLC</b>	on/off
<b>Dynamic range</b>	Off, 1 -- 8
<b>Image adjustment</b>	Brightness, chroma, saturation, contrast, sharpness, black and white mode, gamma curve
<b>SNR</b>	≥50dB
<b>Interface</b>	
<b>Product Interface</b>	HDMI、LAN(POE)、USB3.0(B Type, Compatible with USB2.0)、SDI、A-IN、RS232-IN、RS232-OUT、RS422 (Compatible with RS485) 、Rotary Switch、DC12V Power、
<b>Video Encoding Format</b>	LAN Interface: Support main stream and sub-stream H.265 、 H.264 USB3.0 Interface: main stream support YUY2、 MJPG、 H264、 NV12
<b>Audio input interface</b>	Dual channel 3.5mm linear input
<b>Audio output interface</b>	HDMI、 SDI、 LAN、 USB3.0
<b>Audio compression</b>	AAC, MP3, G.711A
<b>LAN interface</b>	10M/100M/1000M adaptive Ethernet port, support POE power supply, support audio and video output
<b>Network protocol</b>	RTSP, RTMP, ONVIF, GB/T28181, VISCA OVER IP, IP VISCA, RTMPS, SRT Support remote upgrade, remote restart, remote reset
<b>Control Interface</b>	RS232-IN、 RS232-OUT、 RS422 compatible with RS485
<b>Serial communication protocol</b>	VISCA/Pelco-D/Pelco-P; support baud rate 115200/38400/9600/4800/2400
<b>USB communication protocol</b>	UVC (video communication protocol) , UAC (audio communication protocol)
<b>Power interface</b>	HEC3800 Power socket (DC12V)
<b>Power adapter</b>	Input AC110V-AC220V; output DC12V/2.5A
<b>Input voltage</b>	DC12V±10%
<b>Input current</b>	<1A
<b>Consumption</b>	<12W

<b>PTZ</b>	
<b>Pan rotation</b>	-170° -- +170°
<b>Tilt rotation</b>	-30° -- +90°
<b>Pan speed</b>	0.1°/s -- 100°/s
<b>Tilt speed</b>	0.1°/s -- 45°/s
<b>Preset speed</b>	Pan: 100°/s, Tilt: 45°/s
<b>Preset quantity</b>	Maximum 255 preset positions can be set(10 via remote controls)
<b>Other Parameter</b>	
<b>Storage temperature</b>	-10°C -- +70°C
<b>Storage humidity</b>	20% -- 95%
<b>Working temperature</b>	-10°C -- +50°C
<b>Working humidity</b>	20% -- 80%
<b>Dimension</b>	181mm×115mm×149mm
<b>Weight</b>	1.15kg
<b>Environment</b>	Indoor

<b>Accessory</b>	
<b>Standard accessory</b>	Power adapter, RS232 control line, USB3.0 connection line, remote control, manual, warranty card & certificate
<b>Optional accessory</b>	Ceiling mounting bracket, wall mounting bracket

## 3. Remote Control

---

### 3.1 Match code for Wireless Remote Control



#### One to One Code Matching:

Press the "set" and "\*" keys combined for 3 seconds, LED indicator starts flashing. Camera receives the signal and power on, LED indicator will go off if code matching is successful. The camera can be controlled by this wireless remote control only after one-to-one code pairing.

Otherwise please clear the code matching of this remote control or use another remote control to pair with the camera again. If one to one code matching fails, the red LED light flashes for 20 seconds and then goes off, camera will stop code match and turn on sleep mode; Press any key to wake up the camera and re-match code.

Note: After code matching successfully, please select the camera address to control it.

#### Clear Code:

Press the "set" and "\*" keys combined for 3 seconds, LED indicator starts flashing. Camera will power off and on, the LED indicator will go off if clear code successfully.

#### Sleep Mode and Wake Up:

Press any key to wake up the camera from sleep mode.

### 3.2 Keys Introduction for IR Remote Control

1. In this manual, “press the key” means a click rather than a long-press, and a special note will be given if a long press for more than one second is required.
2. When a key-combination is required, do it in sequence. For example, “【\*】 + 【#】 + 【F1】 ” means press “【\*】 ” first and then press “【#】 ” and last press “【F1】 ”.

#### 1. Standby Key


The camera enters standby mode if a long press of 3 seconds is made on the standby key. Long press for 3 seconds again on the standby key, and the camera will self-check again and return to HOME position (If preset 0 position is set, the camera will return to preset 0 position).

#### 2. Camera Selection



Select the camera address to control.

#### 3. Focus Control

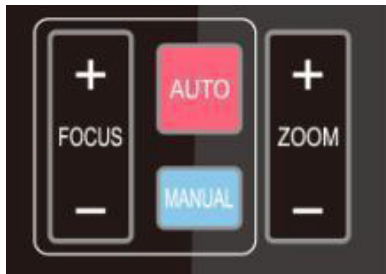

Auto: auto focus mode


Manual: manual focus mode

Focus + (near): press 【FOCUS +】 key (Valid only in manual focus mode)

Focus - (far): press 【FOCUS -】 key (Valid only in manual focus mode)

Press and hold the keys, the action of focus will keep continue and stop as soon as the key is released.

#### 4. Zoom Control

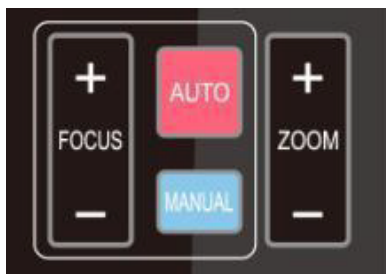

ZOOM +: press 【ZOOM +】 key to zoom in

ZOOM -: press 【ZOOM -】 key to zoom out

Press and hold the keys, the action of focus will keep continue and stop as soon as the key is released.

#### 5. Set and Clear Presets



**Set Preset:** press 【SET PRESET】 button, and then press the number key 0-9 to set preset positions.  
**Note: 10 presets via remote control.**

**Call Preset:** press a number key 0-9 directly to call a preset position.

**Clear Preset:** press 【CLEAR PRESET】 button, and then press the number key 0-9 to clear preset positions.

**Note: press the 【#】 key three times continually to clear all presets.**



## 6. Pan/Tilt Controlz



**Up:** press ▲      **Down:** press ▼

**Left:** press ◀      **Right:** press ▶

**Back to middle position:** press“ 【HOME】 ”

Press and hold the up/down/left/right key, the pan/tilt movements will keep running, from slow to fast, until it runs to the endpoint; stop as soon as the key is released.

## 7. Menu Setting



【MENU】 : Open / close the OSD menu

【HOME】 : Camera lens back to the middle position.

Confirm button; Enter next menu

【↑】 【↓】 Choose item

【←】 【→】 Modify values

【BLC ON/OFF】 Turn on or off the back light compensation

## 8. Camera Remote control Address Setting



- 【\*】 + 【#】 + 【F1】 :Camera Address No.1
- 【\*】 + 【#】 + 【F2】 :Camera Address No. 2
- 【\*】 + 【#】 + 【F3】 :Camera Address No. 3
- 【\*】 + 【#】 + 【F4】 :Camera Address No. 4

## 9. Key Combinations



1. 【#】 + 【#】 + 【#】 : Clear all presets
2. 【\*】 + 【#】 + 【6】 : Restore factory defaults
3. 【\*】 + 【#】 + 【3】 : Menu set to Chinese
4. 【\*】 + 【#】 + 【4】 : Menu set to English
5. 【\*】 + 【#】 + 【9】 : Flip switch
6. 【\*】 + 【#】 + Auto: Enter aging mode
7. 【#】 + 【\*】 + Auto: Exit aging mode
8. 【\*】 + 【#】 + Manual: Restore the default username, password, and IP address
9. 【#】 + 【#】 + 【0】 : Switch the video format to 1080P60
10. 【#】 + 【#】 + 【1】 : Switch the video format to 1080P50
11. 【#】 + 【#】 + 【2】 : Switch the video format to 1080I60
12. 【#】 + 【#】 + 【3】 : Switch the video format to 1080I50
13. 【#】 + 【#】 + 【4】 : Switch the video format to 720P60
14. 【#】 + 【#】 + 【5】 : Switch the video format to 720P50
15. 【#】 + 【#】 + 【6】 : Switch the video format to 1080P30
16. 【#】 + 【#】 + 【7】 : Switch the video format to 1080P25
17. 【#】 + 【#】 + 【8】 : Switch the video format to 720P30
18. 【#】 + 【#】 + 【9】 : Switch the video format to 720P25

Note: If the address of former remote control is not address 1 but another one from 2, 3, 4, the corresponding camera address will restore to address 1 when all parameters are restored to factory default. User should change the remote-control address to address 1.

### 3.3 Menu Introduction

Note: The modification is only valid if you exit the menu before save and power off.

#### 1. Menu Control


**[MENU]** : Enter / exit the OSD menu or return to the previous menu

**[HOME]** : Enter next menu

**[↑] [↓]** Choose item

**[←] [→]** Modify values

#### 2. English Menu

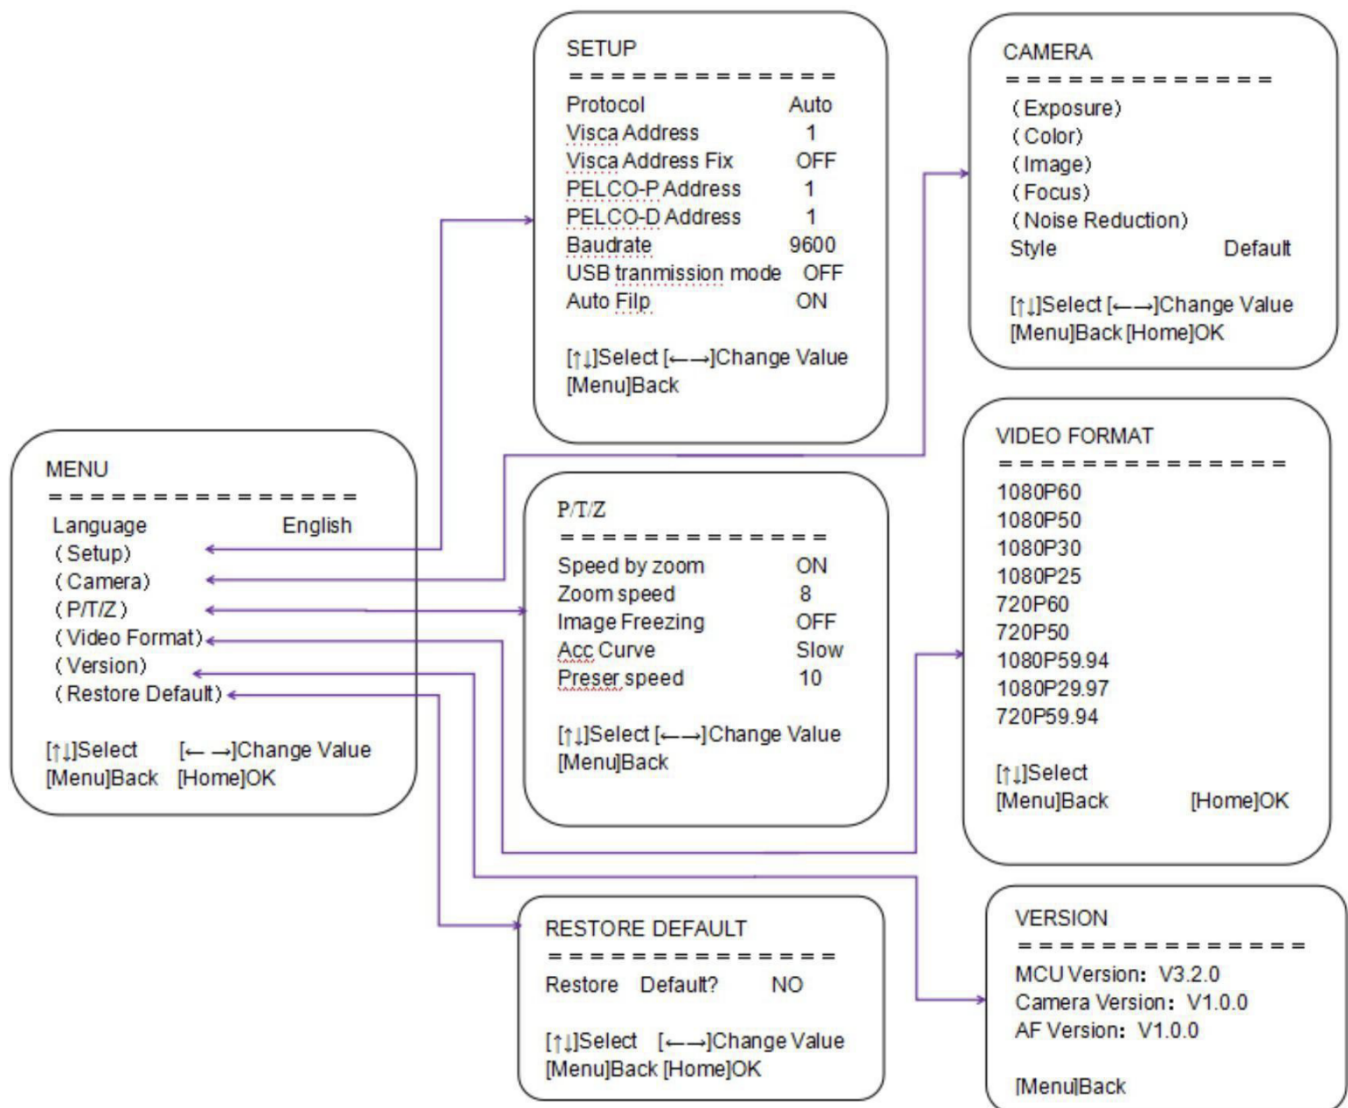



## 4. Network Configuration

---

### 4.1 Network Connection

**Direct connection:** Connect the camera and computer using a network connecting cable.

**Internet connection mode:** Connect the camera to the Internet by Router or Switch and the user can then login to the device by browser web page.

**Note:** Please do not put the power cable and network cable in places where they can be easily touched, to prevent an unstable video signal transmission due to poor contact of cables.

The computer must have the same IP range that the camera IP has. The device will not be accessible if it is not on the same range.

The camera default IP address is 192.168.5.163, therefore the computer needs to be on the same 192.168.5.xxx range.

Firstly, open the window of Local Area Connection Properties on computer, select the "Internet protocol version 4(TCP/IPv4)". Double click or click the property "Internet" protocol version 4 (TCP/IPv4) to enter into the Internet Protocol Version 4(TCP/IPv4) Properties window; select "Advanced" to enter into the Advanced TCP/IP Setting and add IP and subnet mask. Click the "Confirm" to finish the adding of IP range/segment. User can add the corresponding network IP range/segment according to the same IP range/address of the camera.

**Note:** The IP address to be added cannot be same as any other computers or devices on the network. The existence of this IP address needs to be verified before adding.

To verify whether the network segment has been successfully added, for Windows 10 users, in the search bar type cmd, then press return. This will open the DOS command window. Type in ping 192.168.5.26 and press Enter key to display information as shown below:

```
Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 10.0.19042.1466]
(c) Microsoft Corporation. All rights reserved.

C:\Users\Administrator>ping 192.168.5.163

Pinging 192.168.5.163 with 32 bytes of data:
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.5.163:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\Users\Administrator>
```

After camera power on and self-check, follow the steps above to verify network connection. Open DOS command window, ping 192.168.5.163 and press Enter key.

```
Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 10.0.19042.1466]
(c) Microsoft Corporation. All rights reserved.

C:\Users\Administrator>ping 192.168.5.163

Pinging 192.168.5.163 with 32 bytes of data:
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64
Reply from 192.168.5.163: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.5.163:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\Users\Administrator>
```

## 4.2 IE Login

### 1. Client Login

Input the default IP address 192.168.5.163 into the browser and click Enter button to enter into Web Client login page. The user can login as an administrator and a normal user. If logging in as an administrator (Default Username/Password: admin), users can preview, playback, and set configuration in the Web Client; If login in as a normal user (Default

Username/Password:user1 or user2), users can only preview, playback and logout, there is no option for configuration.

**Note: Web access support IE based browsers: IE, 360 browsers etc.**

**Chrome login is available after a firmware update, but will only support basic configuration and preview video, no functions of record video, voice volume, video capture and playback.**

## 2. Download and Install Plug-in for IE login

If it's the first time to login via IE browser, the login page will prompt "Playback plug-in is not installed, please download, and install!" Click on this message, download, and install MRWebXinstall.exe according to the information.

## 3. Web Page Login

After installing the plug-in, enter the username and password, click login (the initial default username and password are: "admin", you can change the username and password after entering), enter the Web client management interface.

Enter username and password (default username and password: "admin").  
Users can manage and change username, password etc.

## 4.3 Streaming

### 1. Video Stream Capture

Configurations -> Video Configure-> Video Encode

Stream	Main Stream	Sub Stream
Compressed Format	H.264	H.264
Profile	HP	HP
Image Size	1920*1080	320*180
Rate Control	CBR	CBR
Image Quality	Best	Better
Bit Rate(Kb/S)	4096	512
Frame Rate(F/S)	25	25
I Frame Interval	75	75
I Frame Min QP	20	20
Stream Name	live/av0	live/av1

Configure the parameters according to the network environment.  
Note: stream name live/av0 (live/ XXX)

For example:

The default IP address of the camera is 192.168.5.163. The way to obtain the RTSP video stream is as below

**rtsp://192.168.5.163:554/live/av0 av0 main stream rtsp://192.168.5.163:554/live/av1 av1 sub stream**

The default IP address of the camera is 192.168.5.163. the way to obtain RTMP video stream is as below

**rtmp://192.168.5.163:1935/live/av0 av0 main stream  
rtmp://192.168.5.163:1935/live/av1 av1 sub stream**

## 2. Push Video Stream

Configurations -> Video Configure-> Stream Publish

	Main Stream	Sub Stream
Enable	<input type="checkbox"/>	<input type="checkbox"/>
Protol Type	RTMP	RTMP
Host Address	192.168.5.11	192.168.5.11
Host Port	1935	1935
Stream Name	live/av0	live/av1
User Name		1
Password		

Push RTMP stream to public network server, the stream camera must be on the public network, otherwise it will fail to connect to server.

Host address: server address, which can be either a domain name or an IP address

Host port: server default port number

Stream name: live/test (live/ XXX)


Username and password: the username and password set by the server, or leave it empty

**Access url rtmp://host domain name: host port/live/xxx**

Or (rtmp://host IP address: host port/live/xxx)

## 4.4 Software Upgrading

1. Log in to the web page and manage camera settings. The default page is preview interface, where user's cam PTZ control, record video, preset camera positions etc.
2. Configurations -> System Configure-> Update

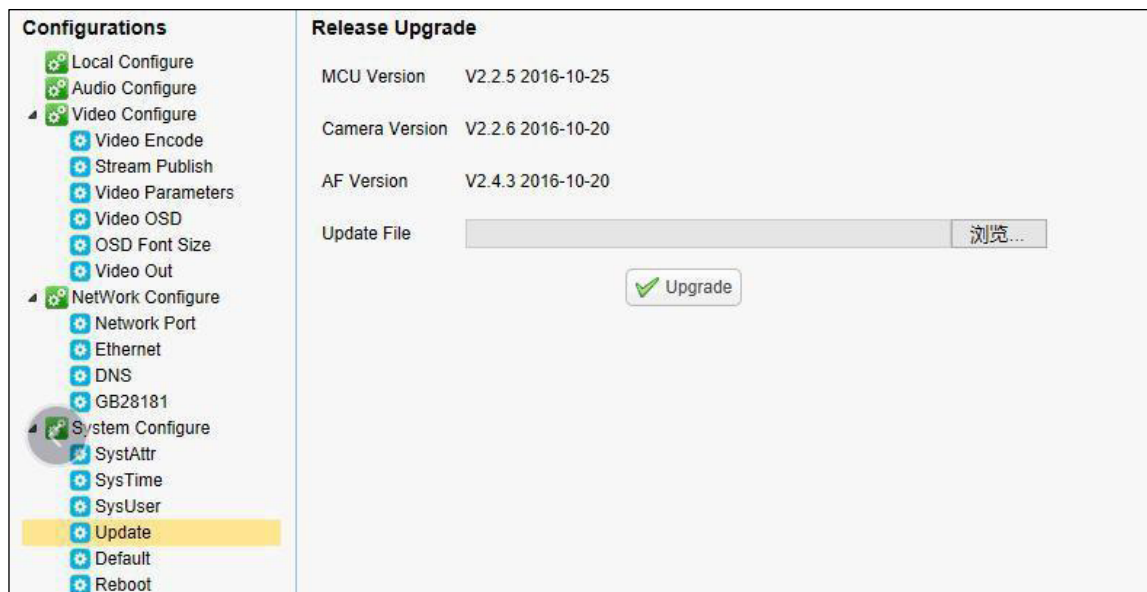

3. Click "browse" to select .mrg update file, then click upgrade button to finish software upgrading.
4. Camera reboot after completion of firmware update. It prompts with "successful upgrade". Log in to check the firmware version to make sure software upgrade successful. Then click "restore factory default", reboot and restore parameters to factory default (default IP 192.168.5.163, username: admin; password admin).

## 5. Serial Communication Control

---

Under normal working conditions, the device can be controlled through the RS232/RS485 interface. The RS232 serial port parameters are as follows:

Baud rate: 2400/4800/9600/38400/115200 bit/sec; start bit: 1 bit; data bit: 8 bits; stop bit: 1 bit; parity bit: none

After power on, the device first turns to the lower left and then back to the middle position. The zoom lens is pulled to the farthest position, and then pulled back to the most recent self-check

to complete. If the device has saved No. 0 preset after initialization, the device will be set to No. 0 preset. At this point, the user can use the serial port command to control the device.

## 5.1 VISCA Protocol Return Command

Ack/Completion Message		
	Command Packet	Note
ACK	z0 41 FF	Returned when the command is accepted.
Completion	z0 51 FF	Returned when the command has been executed.

$z = \text{Camera Address} + 8$

Error Messages		
	Command Packet	Note
Syntax Error	z0 60 02 FF	Returned when the command format is different or when a command with illegal command parameters is accepted
Command Not Executable	z0 61 41 FF	Returned when a command cannot be executed due to current conditions. For example, when commands controlling the focus manually are received during auto focus.

## 5.2 VISCA Protocol Control Command

Command	Function	Command Packet	Note	
AddressSet	Broadcast	88 30 0p FF	p: Address setting	
IF_Clear	Broadcast	88 01 00 01 FF	I/F Clear	
CAM_Power	On	8x 01 04 00 02 FF	Power ON/OFF	
	Off	8x 01 04 00 03 FF		
CAM_Zoom	Stop	8x 01 04 07 00 FF	p = 0(low) - 7(high)	
	Tele(Standard)	8x 01 04 07 02 FF		
	Wide(Standard)	8x 01 04 07 03 FF		
	Tele(Variable)	8x 01 04 07 2p FF		
	Wide(Variable)	8x 01 04 07 3p FF		
	Direct	8x 01 04 47 0p 0q 0r 0s FF		pqrs: Zoom Position
CAM_Focus	Stop	8x 01 04 08 00 FF	p = 0(low) - 7(high)	
	Far(Standard)	8x 01 04 08 02 FF		
	Near(Standard)	8x 01 04 08 03 FF		
	Far(Variable)	8x 01 04 08 2p FF		
	Near (Variable)	8x 01 04 08 3p FF		
	Direct	8x 01 04 48 0p 0q 0r 0s FF		pqrs: Focus Position
	Auto Focus	8x 01 04 38 02 FF		
	Manual Focus	8x 01 04 38 03 FF		
CAM_Zoom Focus	Direct	8x 01 04 47 0p 0q 0r 0s	pqrs: Zoom Position tuvv: Focus Position	
		0t 0u 0v 0w FF		

CAM_AFSensitivity	High	8x 01 04 58 01 FF	Focus sensitivity Setting
	Normal	8x 01 04 58 02 FF	
	Low	8x 01 04 58 03 FF	
CAM_AFZone	Top	8x 01 04 AA 00 FF	Focus Region Setting
	Center	8x 01 04 AA 01 FF	
	Bottom	8x 01 04 AA 02 FF	
	ALL	8x 01 04 AA 03 FF	
CAM_WB	One Push mode	8x 01 04 35 03 FF	One Push WB Trigger(Enabled during One Push WB mode) pq = 00--33 WBMode
	One Push Trigger	8x 01 04 10 05 FF	
	CAM_WB Mode	8x 01 04 35 pq FF	
CAM_AWBSensitivity	Low	8x 01 04 A9 00 FF	WB Sensitivity Setting
	Normal	8x 01 04 A9 01 FF	
	High	8x 01 04 A9 02 FF	
CAM_RGain	Reset	8x 01 04 03 00 FF	Manual Control of R Gain
	Up	8x 01 04 03 02 FF	
	Down	8x 01 04 03 03 FF	
	Direct	8x 01 04 43 00 00 0p 0q FF	pq: R Gain
CAM_Bgain	Reset	8x 01 04 04 00 FF	Manual Control of B Gain
	Up	8x 01 04 04 02 FF	
	Down	8x 01 04 04 03 FF	
	Direct	8x 01 04 44 00 00 0p 0q FF	pq: B Gain

CAM_AE	Full Auto	8x 01 04 39 00 FF	Automatic Exposure mode
	Manual	8x 01 04 39 03 FF	Manual Control mode
	Shutter priority	8x 01 04 39 0A FF	Shutter Priority Automatic Exposure mode
	Iris priority	8x 01 04 39 0B FF	Iris Priority Automatic Exposure mode
	Bright	8x 01 04 39 0D FF	Bright mode
CAM_Shutter	Reset	8x 01 04 0A 00 FF	Shutter Setting
	Up	8x 01 04 0A 02 FF	
	Down	8x 01 04 0A 03 FF	
	Direct	8x 01 04 4A 00 00 0p 0q FF	pq: Shutter Position
CAM_Iris	Reset	8x 01 04 0B 00 FF	Iris Setting
	Up	8x 01 04 0B 02 FF	
	Down	8x 01 04 0B 03 FF	
	Direct	8x 01 04 4B 00 00 0p 0q FF	pq:Iris Position
CAM_Gain Limit	Reset	8x 01 04 0C 00 FF	Gain Limit Setting
	Up	8x 01 04 0C 02 FF	
	Down	8x 01 04 0C 03 FF	
	Gain Limit	8x 01 04 2C 0p FF	p: Gain Positon
CAM_Bright	Reset	8x 01 04 0D 00 FF	Bright Setting
	Up	8x 01 04 0D 02 FF	
	Down	8x 01 04 0D 03 FF	
	Direct	8x 01 04 4D 00 00 0p 0q FF	pq: Bright Positon
CAM_ExpComp	On	8x 01 04 3E 02 FF	Exposure Compensation ON/OFF
	Off	8x 01 04 3E 03 FF	
	Reset	8x 01 04 0E 00 FF	Exposure Compensation Amount Setting
	Up	8x 01 04 0E 02 FF	
	Down	8x 01 04 0E 03 FF	
	Direct	8x 01 04 4E 00 00 0p 0q FF	
CAM_Back Light	On	8x 01 04 33 02 FF	Back Light Compensation
	Off	8x 01 04 33 03 FF	
CAM_WDRStrength	Reset	8x 01 04 21 00 FF	WDR Level Setting
	Up	8x 01 04 21 02 FF	
	Down	8x 01 04 21 03 FF	
	Direct	8x 01 04 51 00 00 00 0p FF	p: WDR Level Positon
CAM_NR	2D	8x 01 04 53 0p FF	P=0-7 0:OFF
	3D	8x 01 04 54 0p FF	P=0-8 0:OFF
CAM_Gamma		8x 01 04 5B 0p FF	p = 0 - 4 0; Default 1: 0.45 2: 0.50 3: 0.55 4: 0.63
CAM_Low-Light Mode	ON	8x 01 04 2D 01 FF	Low-Light Mode Setting
	OFF	8x 01 04 2D 00 FF	
CAM_Gain		8x 01 04 4C 00 00 0p 0q FF	pq: 0-15
CAM_PresetSpeed		8x 01 01 0p FF	p: 1-10



CAM_Flicker	OFF	8x 01 04 23 00 FF	OFF
	50HZ	8x 01 04 23 01 FF	50HZ
	60HZ	8x 01 04 23 02 FF	60HZ
CAM_Aperture	Reset	8x 01 04 02 00 FF	Aperture Control
	Up	8x 01 04 02 02 FF	
	Down	8x 01 04 02 03 FF	
	Direct	8x 01 04 42 00 00 0p 0q FF	pq: Aperture Gain
CAM_Picture effect	B&W-Mode	8x 01 04 63 04 FF	Picture effect Setting
	OFF	8x 01 04 63 00 FF	
CAM_Memory	Reset	8x 01 04 3F 00 pq FF	pq: Memory Number(=0 to 254) Corresponds to 0 to 9 on the Remote Commander
	Set	8x 01 04 3F 01 pq FF	
	Recall	8x 01 04 3F 02 pq FF	
CAM_LR_Reverse	On	8x 01 04 61 02 FF	Image Flip Horizontal ON/OFF
	Off	8x 01 04 61 03 FF	
CAM_PictureFlip	On	8x 01 04 66 02 FF	Image Flip Vertical ON/OFF
	Off	8x 01 04 66 03 FF	
CAM_ColorSaturation	Direct	8x 01 04 49 00 00 0p 0q FF	p=0~7,q=0~f or pq: ColorSaturation Position
CAM_IDWrite		8x 01 04 22 0p 0q 0r 0s FF	pqrs: Camera ID (=0000 to FFFF)
SYS_Menu	ON	8x 01 04 06 06 02 FF	Turn on the menu screen
	OFF	8x 01 04 06 06 03 FF	Turn off the menu screen
IR_Receive	ON	8x 01 06 08 02 FF	IR(remote commander)receive On/Off
	OFF	8x 01 06 08 03 FF	
CAM_SettingReset	Reset	8x 01 04 A0 10 FF	Reset Factory Setting
CAM_Brightness	Direct	8x 01 04 A1 00 00 0p 0q FF	pq: Brightness Position
CAM_Contrast	Direct	8x 01 04 A2 00 00 0p 0q FF	pq: Contrast Position
CAM_Flip	OFF	8x 01 04 A4 00 FF	Single Command For Video Flip
	Flip-H	8x 01 04 A4 01 FF	
	Flip-V	8x 01 04 A4 02 FF	
	Flip-HV	8x 01 04 A4 03 FF	
CAM_VideoSystem	Set camera video system	8x 01 06 35 00 0p FF	P: 0~E Video format 0:1080P60 1:1080P50 2:Invalid Command 3:Invalid Command 4:720P60
			5:720P50 6:1080P30 7:1080P25 A:1080P59.94 B:Invalid Command C:720P59.94 D:1080P29.97 E:Invalid Command

Pan_tiltDrive	Up	8x 01 06 01 VV WW 03 01 FF	VV: Pan speed 0x01 (low speed) to 0x18 (high speed) WW: Tilt speed 0x01 (low speed) to 0x14 (high speed) YYYY: Pan Position ZZZZ: Tilt Position
	Down	8x 01 06 01 VV WW 03 02 FF	
	Left	8x 01 06 01 VV WW 01 03 FF	
	Right	8x 01 06 01 VV WW 02 03 FF	
	Upleft	8x 01 06 01 VV WW 01 01 FF	
	Upright	8x 01 06 01 VV WW 02 01 FF	
	DownLeft	8x 01 06 01 VV WW 01 02 FF	
	DownRight	8x 01 06 01 VV WW 02 02 FF	
	Stop	8x 01 06 01 VV WW 03 03 FF	
	AbsolutePosition	8x 01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
RelativePosition	8x 01 06 03 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF		
Home	8x 01 06 04 FF		
Reset	8x 01 06 05 FF		
Pan-tilt LimitSet	Set	8x 01 06 07 00 0W 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	W:1 Up Right 0:Down Left YYYY: Pan Limit Position(TBD) ZZZZ: Tilt Limit Position(TBD)
	Clear	8x 01 06 07 01 0W 07 0F 0F 0F 07 0F 0F 0F FF	

### 5.3 VISCA Protocol Inquiry Command

Command	Command Packet	Return Packet	Note
CAM_PowerInq	8x 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF	Off(Standby)
CAM_ZoomPosInq	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqrs: Zoom Position
CAM_FocusAFModeInq	8x 09 04 38 FF	y0 50 02 FF	Auto Focus
		y0 50 03 FF	Manual Focus
		y0 50 04 FF	One Push mode
CAM_FocusPosInq	8x 09 04 48 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Position
CAM_AFSensitivityInq	8x 09 04 58 FF	y0 50 01 FF	High
		y0 50 02 FF	Normal
		y0 50 03 FF	Low
CAM_AFZoneInq	8x 09 04 AA FF	y0 50 00 FF	Top
		y0 50 01 FF	Center
		y0 50 02 FF	Bottom
		y0 50 03 FF	All
CAM_WBModeInq	8x 09 04 35 FF	y0 50 pq FF	pq =WBMode
CAM_AWBSensitivityInq	8x 09 04 A9 FF	y0 50 00 FF	Low
		y0 50 01 FF	Normal
		y0 50 02 FF	High
CAM_RGainInq	8x 09 04 43 FF	y0 50 00 00 0p 0q FF	pq: R Gain
CAM_BGainInq	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	pq: B Gain
CAM_AEModeInq	8x 09 04 39 FF	y0 50 00 FF	Full Auto
		y0 50 03 FF	Manual
		y0 50 0A FF	Shutter priority
		y0 50 0B FF	Iris priority
		y0 50 0D FF	Bright

CAM_ShutterPosInq	8x 09 04 4A FF	y0 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	8x 09 04 4B FF	y0 50 00 00 0p 0q FF	pq: Iris Position
CAM_Gain LimitInq	8x 09 04 2C FF	y0 50 0p FF	p: Gain Positon
CAM_BrightPosInq	8x 09 04 4D FF	y0 50 00 00 0p 0q FF	pq: Bright Position
CAM_ExpCompModeInq	8x 09 04 3E FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ExpCompPosInq	8x 09 04 4E FF	y0 50 00 00 0p 0q FF	pq: ExpComp Position
CAM_BacklightModeInq	8x 09 04 33 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_WDRStrengthInq	8x 09 04 51 FF	y0 50 0p FF	p: WDR Strength
CAM_NRLevel(2D) Inq	8x 09 04 53 FF	y0 50 0p FF	P: 2DNRLevel
CAM_NRLevel(3D) Inq	8x 09 04 54 FF	y0 50 0p FF	P: 3D NRLevel
CAM_FlickerModeInq	8x 09 04 55 FF	y0 50 0p FF	p: Flicker Settings(0: OFF, 1: 50Hz, 2:60Hz)
CAM_ApertureInq	8x 09 04 42 FF	y0 50 00 00 0p 0q FF	pq: Aperture Gain
CAM_PictureEffectModeInq	8x 09 04 63 FF	y0 50 00 FF	Off
		y0 50 04 FF	B&W
CAM_MemoryInq	8x 09 04 3F FF	y0 50 0p FF	p: Memory number last operated.
SYS_MenuModeInq	8x 09 06 06 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_LR_ReverseInq	8x 09 04 61 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_PictureFlipInq	8x 09 04 66 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_ColorSaturationInq	8x 09 04 49 FF	y0 50 00 00 0p 0q FF	pq: Color Gain setting 0h (0) to Eh (127)
CAM_IDInq	8x 09 04 22 FF	y0 50 0p FF	p: Gamma ID
IR_ReceiveInq	8x 09 06 08 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_BrightnessInq	8x 09 04 A1 FF	y0 50 00 00 0p 0q FF	pq: Brightness Position
CAM_ContrastInq	8x 09 04 A2 FF	y0 50 00 00 0p 0q FF	pq: Contrast Position
		y0 50 00 FF	Off
		y0 50 01 FF	Flip-H
		y0 50 02 FF	Flip-V
CAM_FlipInq	8x 09 04 A4 FF	y0 50 03 FF	Flip-HV
		y0 50 0p FF	p: Gamma setting
CAM_GammaInq	8x 09 04 5B FF	y0 50 0p FF	p: Gamma setting
CAM_Low-LightModeInq	8x 09 04 2D FF	y0 50 00 FF	OFF
		y0 50 01 FF	ON
CAM_VersionInq	8x 09 00 02 FF	y0 50 ab cd mn pq rs tu vw FF	ab cd : vender ID ( 0220 ) mn pq : model ID rs tu : ARM Version vw : reserve

VideoSystemInq	8x 09 06 23 FF	y0 50 0p FF	P: 0~E Video format 0:1080P60 1:1080P50 2:Invalid Command 3:Invalid Command 4:720P60 5:720P50 6:1080P30 7:1080P25 A:1080P59.94 B:Invalid Command C:720P59.94 D:1080P29.97 E:Invalid Command
Pan-tiltMaxSpeedInq	8x 09 06 11 FF	y0 50 ww zz FF	ww: Pan Max Speed      zz: Tilt Max Speed
Pan-tiltPosInq	8x 09 06 12 FF	y0 50 0w 0w 0w 0w 0z 0z 0z 0z FF	www: Pan Position      zzzz: Tilt Position

## 5.4 PELCO-D Protocol Command List

Function	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7
Up	0xFF	Address	0x00	0x08	Pan Speed	Tilt Speed	SUM
Down	0xFF	Address	0x00	0x10	Pan Speed	Tilt Speed	SUM
Left	0xFF	Address	0x00	0x04	Pan Speed	Tilt Speed	SUM
Right	0xFF	Address	0x00	0x02	Pan Speed	Tilt Speed	SUM
Upleft	0xFF	Address	0x00	0x0C	Pan Speed	Tilt Speed	SUM
Upright	0xFF	Address	0x00	0x0A	Pan Speed	Tilt Speed	SUM
DownLeft	0xFF	Address	0x00	0x14	Pan Speed	Tilt Speed	SUM
DownRight	0xFF	Address	0x00	0x12	Pan Speed	Tilt Speed	SUM
Zoom In	0xFF	Address	0x00	0x20	0x00	0x00	SUM
Zoom Out	0xFF	Address	0x00	0x40	0x00	0x00	SUM
Focus Far	0xFF	Address	0x00	0x80	0x00	0x00	SUM
Focus Near	0xFF	Address	0x01	0x00	0x00	0x00	SUM
Stop	0xFF	Address	0x00	0x00	0x00	0x00	SUM
Set Preset	0xFF	Address	0x00	0x03	0x00	Preset ID	SUM
Clear Preset	0xFF	Address	0x00	0x05	0x00	Preset ID	SUM
Call Preset	0xFF	Address	0x00	0x07	0x00	Preset ID	SUM
Query Pan Position	0xFF	Address	0x00	0x51	0x00	0x00	SUM
Query Pan Position Response	0xFF	Address	0x00	0x59	Value High Byte	Value Low Byte	SUM
Query Tilt Position	0xFF	Address	0x00	0x53	0x00	0x00	SUM
Query Tilt Position Response	0xFF	Address	0x00	0x5B	Value High Byte	Value Low Byte	SUM
Query Zoom Position	0xFF	Address	0x00	0x55	0x00	0x00	SUM
Query Zoom Position Response	0xFF	Address	0x00	0x5D	Value High Byte	Value Low Byte	SUM

## 5.5 PELCO-P Protocol Command List

Function	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte 8
Up	0xA0	Address	0x00	0x08	Pan Speed	Tilt Speed	0xAF	XOR
Down	0xA0	Address	0x00	0x10	Pan Speed	Tilt Speed	0xAF	XOR
Left	0xA0	Address	0x00	0x04	Pan Speed	Tilt Speed	0xAF	XOR
Right	0xA0	Address	0x00	0x02	Pan Speed	Tilt Speed	0xAF	XOR
Upleft	0xA0	Address	0x00	0x0C	Pan Speed	Tilt Speed	0xAF	XOR
Upright	0xA0	Address	0x00	0x0A	Pan Speed	Tilt Speed	0xAF	XOR
DownLeft	0xA0	Address	0x00	0x14	Pan Speed	Tilt Speed	0xAF	XOR
DownRight	0xA0	Address	0x00	0x12	Pan Speed	Tilt Speed	0xAF	XOR
Zoom In	0xA0	Address	0x00	0x20	0x00	0x00	0xAF	XOR
Zoom Out	0xA0	Address	0x00	0x40	0x00	0x00	0xAF	XOR
Stop	0xA0	Address	0x00	0x00	0x00	0x00	0xAF	XOR
Focus Far	0xA0	Address	0x01	0x00	0x00	0x00	0xAF	XOR
Focus Near	0xA0	Address	0x02	0x00	0x00	0x00	0xAF	XOR
Set Preset	0xA0	Address	0x00	0x03	0x00	Preset ID	0xAF	XOR
Clear Preset	0xA0	Address	0x00	0x05	0x00	Preset ID	0xAF	XOR
Call Preset	0xA0	Address	0x00	0x07	0x00	Preset ID	0xAF	XOR
Query Pan Position	0xA0	Address	0x00	0x51	0x00	0x00	0xAF	XOR
Query Pan Position Response	0xA0	Address	0x00	0x59	Value High Byte	Value Low Byte	0xAF	XOR
Query Tilt Position	0xA0	Address	0x00	0x53	0x00	0x00	0xAF	XOR
Query Tilt Position Response	0xA0	Address	0x00	0x5B	Value High Byte	Value Low Byte	0xAF	XOR
Query Zoom Position	0xA0	Address	0x00	0x55	0x00	0x00	0xAF	XOR
Query Zoom Position Response	0xA0	Address	0x00	0x5D	Value High Byte	Value Low Byte	0xAF	XOR

## 6. Maintenance and Troubleshooting

---

### 6.1 Maintenance

1. Please power off the camera and disconnect the power adapter and socket if it's not going to be used for a long period of time.
2. Use a soft cloth or tissue to clean the camera cover.
3. Wipe it with a soft, dry cloth when cleaning the camera lens. Wipe it gently with a mild detergent if needed. Do not use strong or corrosive detergents to avoid scratching the lens and affecting the video quality.

### 6.2 Troubleshooting

#### 1. No video output

- a. Check whether the camera power supply is connected, the voltage is normal, the power indicator is lit.
- b. Whether the machine could do self-check after restarted.
- c. Check whether the bottom of the DIP switch is the normal operating mode (see Table 2.2 and Table 2.3)
- d. Check whether the video output cable or video display is normal

#### 2. No image sometimes

- a. Check whether the video output cable or video display is normal

#### 3. Video dithering when zoom-in or zoom-out

- a. Check whether the camera installation position is solid
- b. Whether there is shaking machine or objects around the camera

#### 4. Remote control not works


- a. Remote control address is set to 1 (if the machine is set back to the factory defaults, remote control addresses need to be back to 1 too)
- b. Check whether the battery is installed on the remote controller or low .
- c. Check the camera working mode is the normal operating mode (see Table 2.2 and Table 2.3)
- d. Check the menu whether is closed, camera control through remote controller is only available after exiting the menu. If video output from LAN, menu will not be displayed, menu will automatically exists 30s later, and then it can be controlled by remote controller.

#### 5. Serial port not works

- a. Check whether the camera serial device protocol, baud rate, address is consistent
- b. Check whether the control cable is connected properly
- c. Check whether the camera working mode is the normal operating mode

## 6. Web pages cannot log in

- a. Check if the camera outputs video normally by connecting directly to the screen.
- b. Check whether the network cable is connected properly (Ethernet port yellow light flashes to indicate normal network cable connection)
- c. Check whether your computer is added the segment and the segment is consistent with the IP address of the camera
- d. Click "Start" and select "Run" and then type "cmd" in the computer; Click "OK" then turn on a DOS command window to enter ping 192.168.5.163. Press the Enter key to appear message as follows: Description network connection is normal

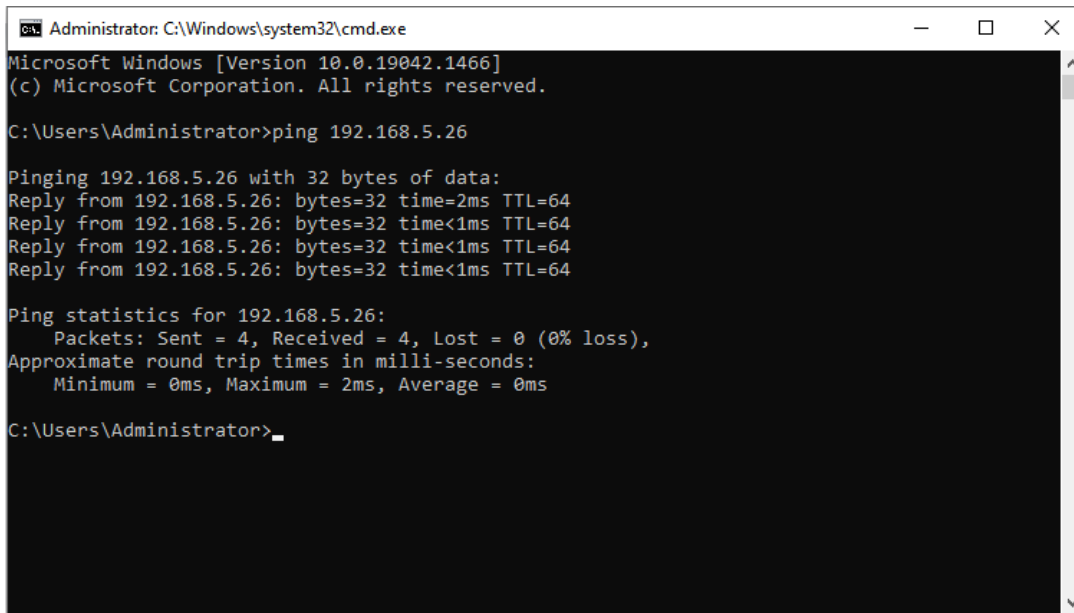

```
Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 10.0.19042.1466]
(c) Microsoft Corporation. All rights reserved.

C:\Users\Administrator>ping 192.168.5.26

Pinging 192.168.5.26 with 32 bytes of data:
Reply from 192.168.5.26: bytes=32 time=2ms TTL=64
Reply from 192.168.5.26: bytes=32 time<1ms TTL=64
Reply from 192.168.5.26: bytes=32 time<1ms TTL=64
Reply from 192.168.5.26: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.5.26:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 2ms, Average = 0ms

C:\Users\Administrator>
```

## 5. Copyright Statement

---

All the contents in this manual and its copyright are owned by the company. No one is allowed to imitate, copy, or translate this manual without the company's permission. This manual contains no guarantee, standpoint expression or other implies in any form. Product specification and information in this manual is for reference only and subject to change without notice. All rights reserved. No reproducing is allowed without acknowledgement.





© Copyright 2022. Hall Technologies  
All rights reserved.

1234 Lakeshore Drive, Suite #150, Coppell, TX 75019  
halltechav.com / support@halltechav.com  
(714)641-6607