



Jupiter

Pana 105T Interactive Display User Manual



February 8, 2024
A-PAN-000-01, Rev. C

Copyright © 2024 Jupiter Systems Inc. ("Jupiter"). This document is copyrighted with all rights reserved.

Jupiter Systems owns the copyright for this manual.

Use or reproduction of this manual in parts or entirety without the authorization of Jupiter Systems is prohibited.

The contents of this manual are subject to change without notice to improve quality.

Acknowledgments

Jupiter Systems® and Jupiter logo® are registered trademarks of Jupiter Systems. New Jupiter logo, Canvas™, Catalyst™, Fusion Catalyst™, Catalyst XL™, Catalyst V™, Catalyst 4K™, CRS-5K™, CRS-4K™, J4™, J100™, J400™, J600™, Zavus™, and Pana™ are trademarks of Jupiter Systems.

Microsoft, Windows are registered trademarks of Microsoft Corporation.

All non-Jupiter brands and names are the property of their respective owners.

Conventions Used in this Manual

Labels from the user Interface (UI) are **bolded** to make it easier to follow instructions. If you see a **bolded** word or set of words, look for the label in the UI. Where possible tabs and dialog boxes are named in instructions as markers so you know you are in the right place.

Jupiter Systems

31015 Huntwood Avenue
Hayward, CA 94544-7007
510-675-1000 (v)

Support Contact

info@jupiter.com
support@jupiter.com
510-675-1007 (v)



Table of Contents

CHAPTER 1. READ ME FIRST	1
1.1 Read Me First	1
1.2 Contents of Packaging	1
1.3 Handling Precautions	1
1.4 Cleaning	2
1.5 Receiving and Inspecting Shipment.....	3
1.5.1 Shipment Monitors	3
1.5.2 What To Do If Either or Both Shipment Monitors Are Triggered.....	3
1.5.3 Inspection Procedure	3
1.6 Unpack the Pana	4
1.7 Storage Considerations	5
1.8 Modifications to Product.....	5
1.9 Disposal of Product.....	5
CHAPTER 2. PANA 105T FEATURES	7
2.1 Features	7
2.2 Views of Your Pana 105T	8
2.2.1 Buttons & Remote Control	8
2.2.1.1 Effective Use of Remote.....	8
2.2.1.2 Batteries for Remote Control.....	9
2.2.2 Connectors.....	10
2.2.3 Speakers.....	11
2.3 Specifications	12
2.3.1 Screen & Touch Specifications	12
2.3.2 Connector Specifications	14
2.3.3 Audio Output Specifications	15
2.3.4 Physical & Environmental Specifications	16

CHAPTER 3. PANA 105T OPERATION	19
3.1 Buttons on Pana and Remote	19
3.2 Menus/Settings	21
3.2.1 Input (Remote).....	21
3.2.2 Input (Display).....	21
3.2.3 Picture.....	22
3.2.4 Colour	24
3.2.5 Audio.....	25
3.2.6 Advanced.....	25
3.2.7 Other	27
3.3 Input Capabilities and Cabling Considerations	27
3.4 Touch and Touchback	28
3.5 Touch Screen.....	29
3.6 Image Retention and Burn-In.....	29
3.6.1 Issue	29
3.6.2 Recommendations	29
3.6.3 Resolutions	29
3.7 Aspect Ratio.....	30
CHAPTER 4. PANA 105T INSTALLATION	35
4.1 Installation Location	35
4.2 Electrical Precautions	35
4.3 Mounting Considerations	35
4.4 Mounting Dimensions	36
CHAPTER 5. PANA 105T WARRANTY & SUPPORT	37
5.1 Customer Support.....	37
5.1.1 Hardware Faults.....	37
5.1.2 Technical Assistance	37
5.1.3 Contact Information.....	37
5.2 Warranty	38
5.2.1 Warranty Period	38
5.2.2 Limited Warranty.....	38
5.2.3 Warranty Limitations	39
5.2.4 How Service is Handled.....	40
5.2.5 Additional Information Concerning Warranty Service	40
5.2.6 Pixel Functionality	40
Index	47



Chapter 1

READ ME FIRST

Congratulations on your purchase of the Pana Collaborative display!

Pana's 21:9 7 plus-foot wide Pana 105T interactive touch collaborative display canvas is a true focal piece of collaboration and visualization technology.

1.1 Read Me First

This user manual was created to help you get the most out of your display.

In addition to detailed descriptions of the display and its features, this manual will guide you through the installation and setup processes and best practices on how best to utilize the display.

We make every effort to ensure that this manual is accurate as of the date is printed. However, it may require periodic updating due to ongoing product improvements and customer feedback. Find the latest version of our manuals at Jupiter.com

1.2 Contents of Packaging

- Pana Display
- Remote Control & Batteries
- Power Cable
- Lifting eyelets

1.3 Handling Precautions

WARNING! Handle the Pana Display Properly!

- At least two people are required to transport or lift the display, whether it is in its shipping container or not
 - Do not tilt the display at an angle greater than 10 degrees from upright
 - **DO NOT PLACE THE DISPLAY FACE UP OR FACE DOWN**
 - **DO NOT SHAKE THE DISPLAY**
 - Avoid touching the screen when moving the Pana
-

- Use the handles on either end of the shipping box to lift
- When working with a Pana 105 D or T model, the consideration is not just size but weight. The eight foot long monitors weigh approximately 135 and 215 pounds (roughly 65 and 100 Kg) respectively. The nearly six and a half foot Pana 81T weighs about 115 pounds, and the 81D is nearly 80 pounds. The combination of length and weight means it is safer for at least two people to move them
- **Remember do not touch or put any pressure on the screen when moving the Pana!**
- Always have the shipping container in an upright position. Do not tilt the shipping container more than 10 degrees from vertical
- When moving the Pana, it is recommended to keep the Pana within the shipping box and to use a padded furniture dolly. You will still need two people to maneuver the box and keep it upright



- Keep the Pana in the shipping container until ready to mount
- The shipping container has a tilt indicator and shock indicator which show whether the shipping container has been tilted or experience shock events during shipment. If either of the indicators have been triggered see the procedures in [Section 1.5 Receiving and Inspecting Shipment](#) for instructions how to proceed

1.4 Cleaning

- Do not clean the display with alcohol, solvents, or ammonia, as these could damage the display
- Never spray any liquid directly onto the screen
- Do not let any kind of liquid enter the display as it may cause electrical shock or damage
- Should the surface of the display become dirty, please wipe the surface lightly with a microfiber cloth
- If the surface requires additional cleaning, lightly moisten the cloth with deionized water as found in screen cleaning kits
- Should there be excess dirt and/or grease buildup, use a very diluted solution of water with less than 5% dish soap (roughly less than 1 part mild dish soap to 20 parts water)

1.5 Receiving and Inspecting Shipment

The first thing you should do upon receipt of the Pana shipment is to check the shipment monitors and follow the directions in this section.

1.5.1 Shipment Monitors

On either end of the shipping container are shipment monitors which are triggered by events which occur during shipment. The tilt monitor has an indicator which turns red when the container has been tilted. The shock monitor has an indicator which turns red when an impact exceeds an acceptable level.

1.5.2 What To Do If Either or Both Shipment Monitors Are Triggered

- 1 *Accept the shipment (Do not refuse the shipment)*
- 2 *Add a notation to the shipping receipt*
- 3 *When you open the shipping container inspect the Pana monitor for damage. See [Inspection Procedure](#) below.*
- 4 *If any damage is discovered, request immediate inspection from the carrier*

1.5.3 Inspection Procedure

- 1 *Visually inspect the shipping container*
If any damage is discovered, request immediate inspection from the carrier.
- 2 *Unpack the Pana. See [Section 1.6 Unpack the Pana](#)*
- 3 *Look for any visible damage to the screen or other parts of the Pana*
- 4 *Look for and document any dents, scratches, or other visible signs of damage to the screen or the enclosure*
- 5 *While still in the lower shipping container, plug in power, turn on power, connect to a video source, such as a 128 gray and a full 255 white from a paint program and visually inspect the screen*

1.6 Unpack the Pana

The Pana shipping container has a slide off top cover. The Pana is protectively wrapped in the bottom, base container. The safest way to store and move the Pana display before installing it is in the shipping container.


The procedure for mounting the display, includes moving the unit, so after visual inspection you should put the top cover back on and reattach the stabilizer snaps.

Figure 1.1: Pana packaging

Pinch the inner bars of the cardboard stabilizer snaps and pull them out.

Lift the top box cover and keep it level

Remove the top foam padding, the cardboard screen cover and the plastic wrapping

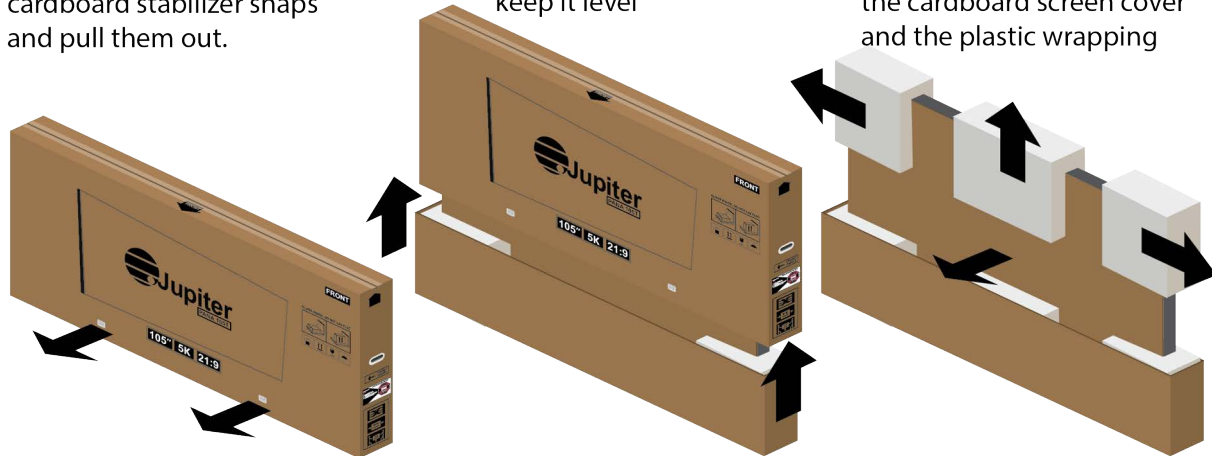

1 Remove the cardboard stabilizer snaps

There are two stabilizer snaps on the front and back of the shipping container which hold the outer shipping cover with the base unit. Remove them by pinching the inner bars together and pulling the stabilizer snaps out.

2 Slide the outer shipping cover off

Sliding the outer shipping cover off requires one person at either end of the shipping container. Keeping the cover level as you lift it off. Do not tilt the shipping container so the shipment monitors will still be useful if you need to ship it again.

3 Remove the top foam padding

4 Remove the cardboard sheet which protects the screen

5 Remove the plastic wrapping

6 Fully removing the Pana from the base is only recommended when installing the Pana in its final mounted position.

Using at least two people lift and slide the Pana out of the bottom base foam padding.

See [Chapter 4, Pana 105T Installation, on page 35](#) for guidance about mounting and installing the Pana.

1.7 Storage Considerations

- Ensure that Product storage remains within the range of 0° C to 50° C. (32° F – 122° F)
- Always have the shipping container in an upright position
- Do not place the display face up or face down even if it is in the shipping container

1.8 Modifications to Product

CAUTION: Any changes or modifications, including but not limited to hardware and software modifications not expressly approved by Jupiter Systems could void the user's authority to operate the equipment.

1.9 Disposal of Product

The product contains small amounts of tin, lead and/or mercury. Disposal of these materials may be regulated due to environmental considerations.

DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC EQUIPMENT (Applicable throughout the European Union and other European countries with separate collection programs).



This symbol found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product.

The recycling of materials will help to conserve natural resources. This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer, and ask for the correct method of disposal.

This page has been intentionally left blank





Chapter 2

PANA 105T FEATURES

Optimize team productivity, provide improved interaction and workplace collaboration technology with Jupiter System's Pana 21:9 displays.

2.1 Features


The Pana 105T provides the following exciting features:

- **21:9 Panoramic**
The extra wide form factor is inspired by our natural human ability to see wider than tall.
- **5K Resolution**
Pana provides 33% more pixels with 5K resolution, giving the user more real estate in which to work.
- **Touch Enabled**
The Touch models enable the expectation for interactive autonomy, speed and ease-of-use. Pana interactive displays are touch driven by multiple, simultaneous collaborators.

2.2 Views of Your Pana 105T

2.2.1 Buttons & Remote Control


Figure 2.1: Pana 105T and remote control buttons

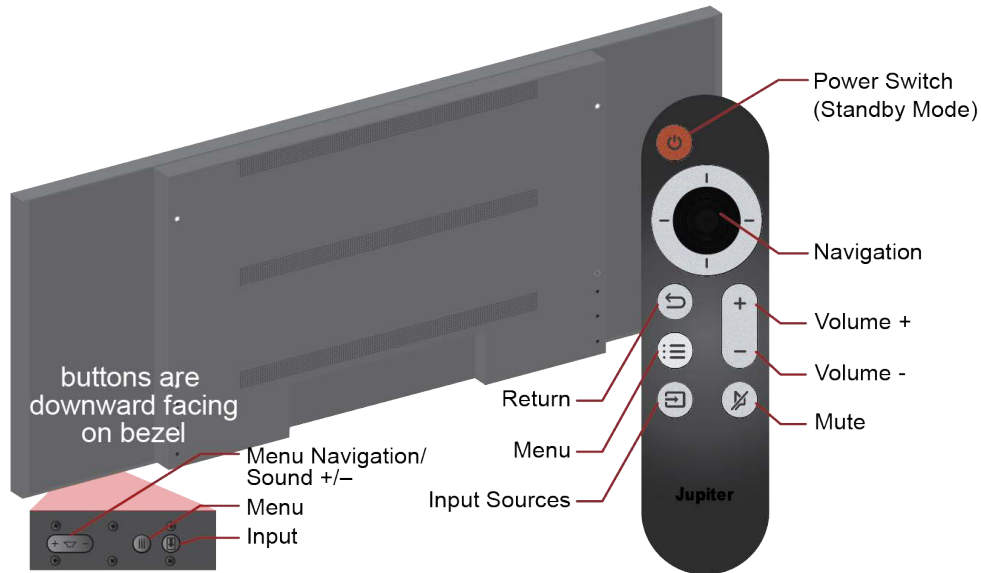

See [Section 3.1 Buttons on Pana and Remote on page 19](#) for button functions and [Section 3.2 Menus/Settings on page 21](#) for information about settings.

2.2.1.1 Effective Use of Remote

Figure 2.2: Remote sensor window

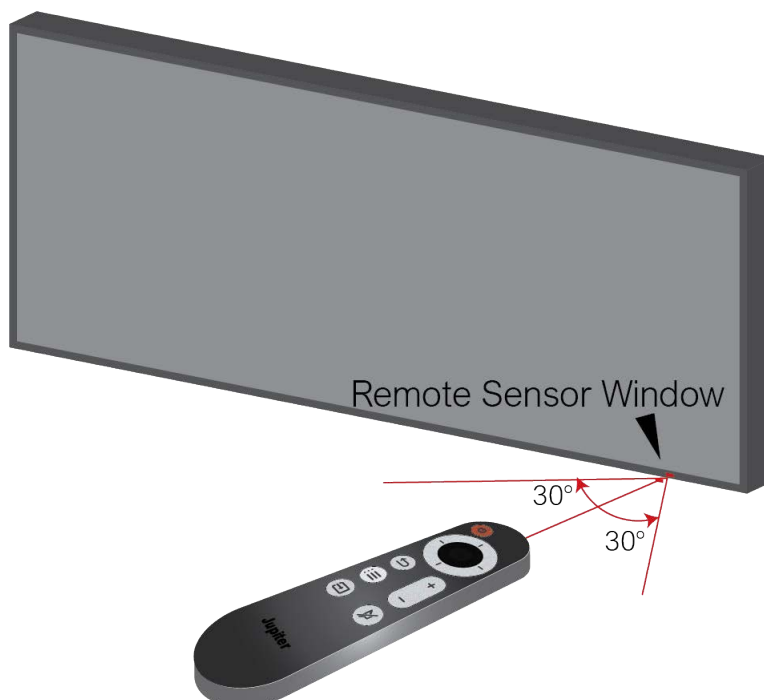

For effective use of the remote:

- Ensure there is a clear path between the remote control and the Remote Sensor window on the Pana display. The remote works within a 30° angle from perpendicular to the screen
- If the effective range of the remote control decreases, or it stops working, replace the batteries with new batteries
- The remote control may fail to operate if the infrared remote sensor is exposed to bright sunlight or fluorescent lighting

Ambient light conditions may possibly impede the operation of the remote control. If the functioning of the remote control seems to not be working properly, point the remote control at the Remote Sensor window on the Pana display, and repeat the operation.

2.2.1.2 Batteries for Remote Control


The remote control uses two AAA batteries.

Battery Cautions!

- **Please make sure the battery is disposed of properly or recycled after using**
- **Keep batteries away from children**
- **Do not throw batteries into fire**
- **Use only the correct battery type. There is a risk of fire or explosion if the batteries are replaced by an incorrect type**

Install Batteries

Figure 2.3: Battery installation

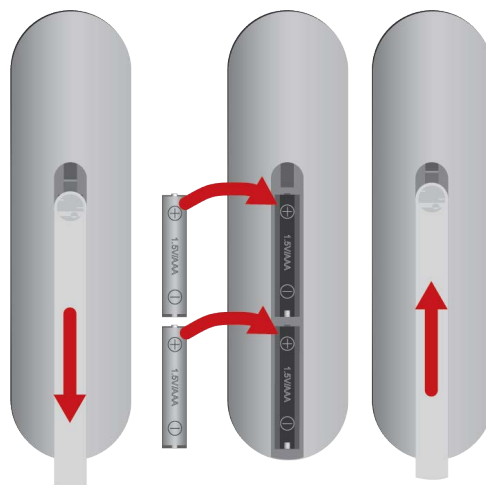


- 1 *Open back battery cover of remote control*
- 2 *Install AAA type batteries according to the corresponding electrode, make sure battery positive and negative poles are correct (+ to +, - to -); please do not mix using old and new batteries*
- 3 *After batteries are installed, replace the battery cover and close it until it clicks shut*

2.2.2 Connectors

Optional OPS devices (Open Pluggable Specification) are available to add computing capabilities to Pana displays. Please see the Jupiter Systems website or talk with your sales representative.

Figure 2.4: Pana 105T input, power and sound connections

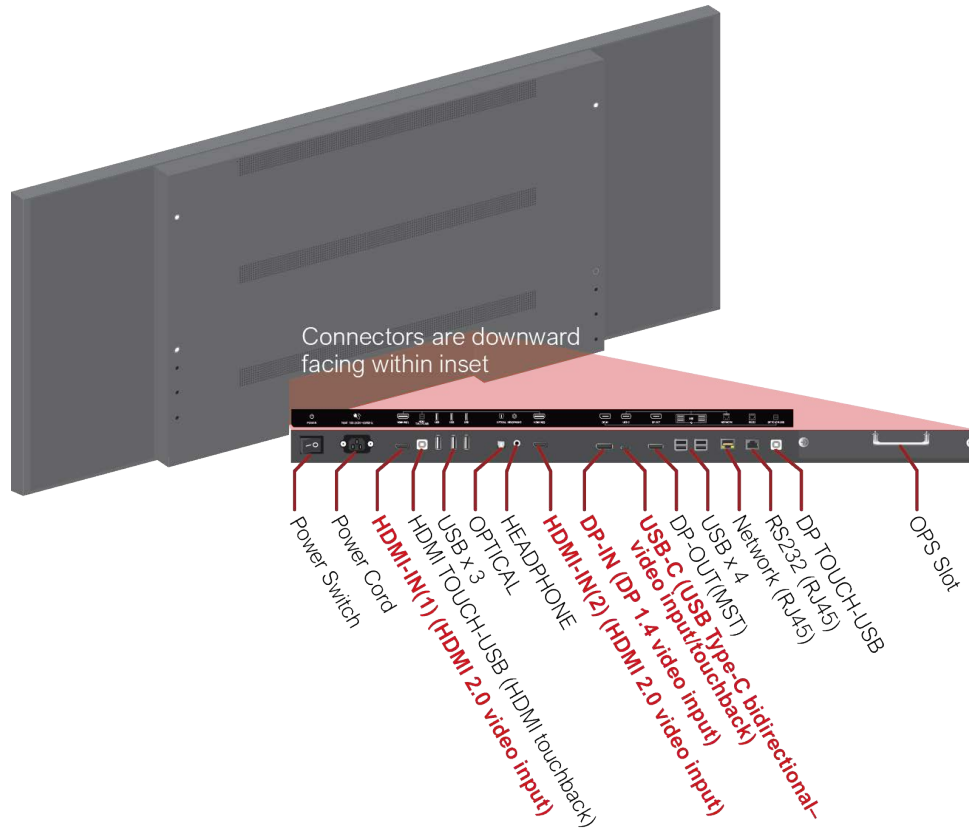


See [Interface Specifications on page 14](#) for more information about the inputs.

2.2.3 Speakers

There are no removable parts for the speakers. Use the Optical output or audio output for sound system accessories.

Figure 2.5: Speaker location

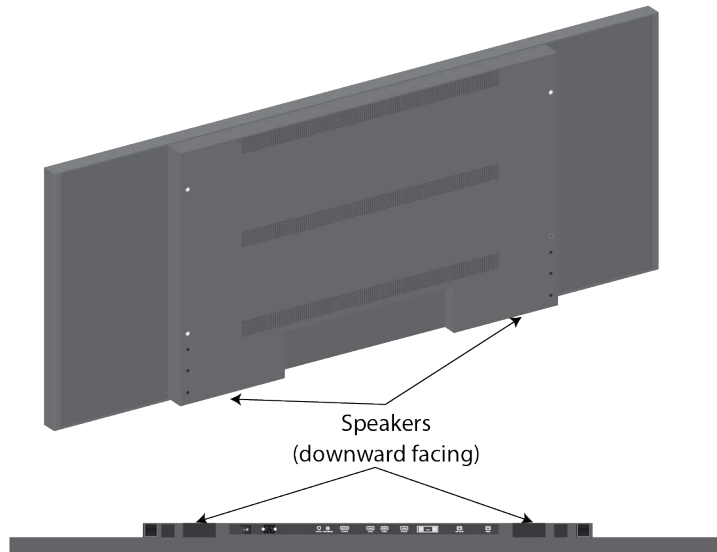

2.3 Specifications

2.3.1 Screen & Touch Specifications

Figure 2.6: Pana 105T diagonal screen size



Table 2.1: Screen Specifications

Item	Description
Display Dimension	105" Diagonal
Aspect Ratio	21:9
Panel	LCD
Resolution	5120(Horizontal) × 2160(Vertical)
Maximum Display Frequency (Resolution H*V/Fv)	5120 x 2160 @60Hz
Horizontal Frequency	45.9762 to 61.2745 MHz
Vertical Frequency	57 to 62 Hz
Brightness (Typical)	600 nits
Contrast (Typical)	1200:1
Color Gamut	DCI-P3 90%
Display Colors	1.07G (8bits+FRC)
HDR	HDR400
Back-light	DLED

Table 2.1: Screen Specifications

Item	Description
Pixel Pitch	0.4785(H) x 0.4785(V) mm
Response Time (Typical)	8ms
Viewing Angle	H/V 178°/178°
Panel Surface	AG25/Clear(CF /TFT POL). Anti-Fingerprint
On Screen Display Language	English (Default), Chinese
Color Settings	3200K, 5000K, 6500K, 9300K, 12000K, User Mode
Preset Modes	Standard, Game, Movie, Photo, Vivid, User

Table 2.2: Touch Specifications

Item	Description
Touch Type	Infrared Sensor
Touch Point	20 Point
Touch Depth	3mm
Finger Separation	25mm
Minimum Touch Diameter	3mm
Positioning Accuracy	±1.5mm within 90% working area
Touch Response Time	≤ 10ms
Report Rate	≥ 100Hz
OS Support	Windows/ Mac OS

2.3.2 Connector Specifications

Table 2.3: Interface Specifications

Interface Label	Description
OPS slot	Slot for optional Open Pluggable Specification device. Adds computing capability to displays.
Power	Power cable appropriate for region. Power cord (ships with product)
HDMI IN(1)	HDMI 2.0 x 1
HDMI IN(2)	HDMI 2.0 x 1
HDMI TOUCH-USB	Provides touchback for external touch devices.
DP IN	DisplayPort 1.4 x 1 (DP 1.4, 1.2, and 1.1)
DP OUT	Display Port 1.4, Supports MST
DP TOUCH-USB	USB Type-B x 1
USB	USB 2.0 Gen1 (A type) x 4
USB-C	USB TYPE C 3.0 x 1 (also known as USB Type-C and USB-C), Provides 65W PD output. DP1.4 alt. mode, HDCP 2.2
OPTICAL (Audio Output Interface)	S/PDIF Optical Fiber x 1
HEADPHONE	3.5mm x1
NETWORK	RJ45 Ethernet
RJ45/RS 232	RJ45 connector with RS 232 protocol for local serial control

2.3.3 Audio Output Specifications

Table 2.4: Speaker Specifications

Specification	Description
Rated Impedance	8 OHM \pm 10 %
F0	250Hz \pm 20 %Hz
Effective Bandwidth	F0~20K \pm 20 %
Voltage Sensitivity	83 SPL \pm 3dB
Distortion	5 % MAX
Handling Power	12 W / 96HR
Maximum Power	15W / 30MIN

2.3.4 Physical & Environmental Specifications

Figure 2.7: Physical dimensions

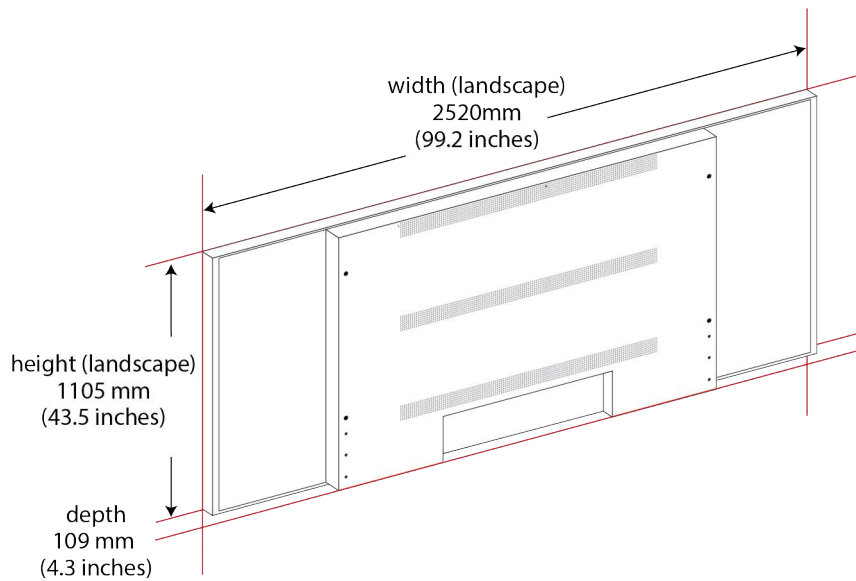


Table 2.5: Physical Specifications

Item	Description
Dimensions - width x height x depth - mm (inches)	2520w x 1105h x 109d mm (99.2w x 43.5h x 4.3d inches)
Width (landscape) - mm (inches)	2520mm (99.2 inches)
Height (landscape) - mm (inches)	1105 mm (43.5 inches)
Depth - mm (inches)	109 mm (4.3 inches)
Weight - kg (pounds)	94 Kg (207 pounds)
Mounting Characteristics	1500 x 600mm
Power Cable	3m (9.8 ft)

Table 2.6: Environmental Specifications

Item	Description
Operating Temperature	0°C - 40°C (32°F to 104°F)
Storage Temperature	-20° C to 60° C. (-4° F to 140° F)
Operating Humidity	10% ~ 80%, non-condensing
Storage Humidity	10% ~ 90%, non-condensing
Maximum Altitude	Not above 5000 meters (~16,400 feet)

Table 2.7: Power Consumption

Item	Description
Maximum Power Consumption	600 W
Standby Power Consumption	0.5 W
Typical Power Consumption	333 W

Table 2.8: Shipping Dimensions

Item	Description
Shipping Dimensions - mm (inches)	2780w x 1500h x 330d mm (109.4w x 59h x 13d inches)
Shipping Weight - kg (pounds)	117 Kg (258 pounds)

Table 2.9: Environmental Considerations and Certifications

Item	Description
Environmental Considerations	
Packaging	Brown corrugated carton + EPE foam (100% recyclable)
Certifications	
cULus, FCC, RoHS, Energy Star, CEC, CA65, CE, ErP, REACH, WEEE, UKCA, IECEE, SAA, RCM, GEMS, PSE, VCCI, PSB, CCC, INMETRO, NOM, BIS	

This page has been intentionally left blank



Chapter 3

PANA 105T OPERATION

This chapter discusses setting up and using your Pana 105T monitor.

- See [Section 3.2, Menus/Settings on page 21](#) for information about the presets and other settings
- See [Section 3.4, Touch and Touchback on page 28](#) for information regarding touchback and USB ports for each input type.
- See [Section 3.5, Touch Screen on page 29](#) for information about navigating the touch screen

3.1 Buttons on Pana and Remote

Both the remote control and the Pana have buttons for many features. For greater detail about the usage of the menus and configuration options, please see [Section 3.2, Menus/Settings on page 21](#).

Figure 3.1: Pana 105T and remote control buttons


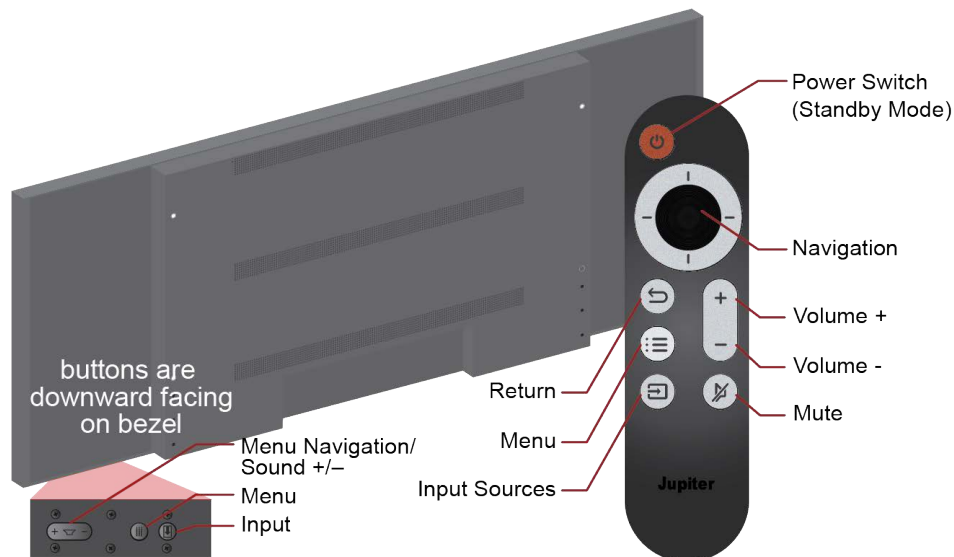



Table 3.1: Button Functions

Button	Located	Description
Power Switch	Pana	Hard Power Switch is an On/Off button which provides power to the Pana on the bottom of the Pana near the plug. A soft power button (Power Switch/Standby) is on the bottom of the screen bezel at the center when the Pana is in the landscape orientation. The remote has a power/standby button. The Power Switch/Standby requires the Pana to be ON
Volume +/-	Both	Increase or decrease volume. Affects both speakers and volume to audio output
Input Sources	Both	Change the source input. Options are <ul style="list-style-type: none"> • USB-C • DP • OPS • HDMI-IN(2) • HDMI-IN(1) • Auto select In addition to Input functionality, the Input button on the Pana (but not on the remote) functions like the Return button on the remote
Standby Mode	Both	Enter/exit standby mode
Navigation	Both	Navigate screen menus. See Section 3.2, Menus/Settings on page 21 .
Menu	Both	Displays menus to select. Note the graphic menu options are a visual menu. Also selects the menu option (mainly for Pana button control)
Return	Remote	Return to previous item

3.2 Menus/Settings

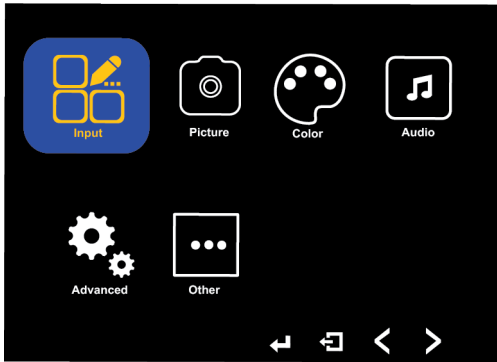

3.2.1 Input (Remote)

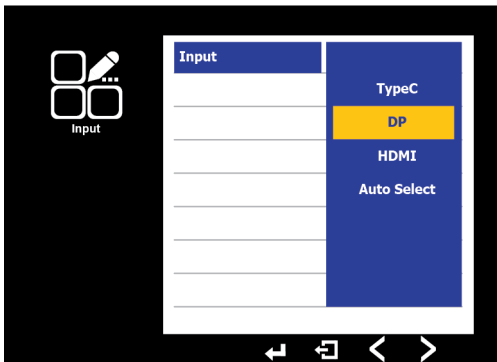


Select the input source for the display.

3.2.2 Input (Display)



Select the input source for the display.

3.2.3 Picture

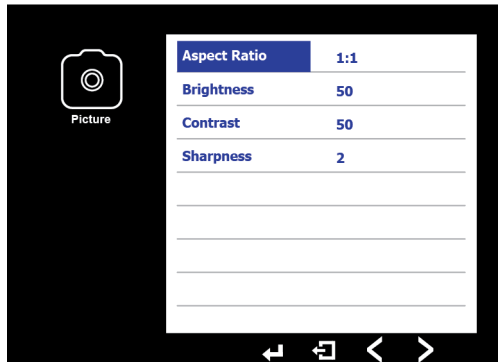

Aspect Ratio

Aspect ratio refers to the width to height ratio of an image. This relationship can be expressed as a ratio like 21:9 or 16:9 or the aspect ratio may also be expressed by resolution — the number of pixels wide by the number of pixels high — or both.

The native resolution of the Pana is 5120x2160. The aspect ratio of the Pana is 21:9.

The Aspect Ratio settings takes the resolution of the incoming signal from a source and puts it in the Pana's 21:9 5120x2160 framework in a variety of ways. See [Section 3.7, Aspect Ratio on page 30](#) for visual examples and a more complete discussion of aspect ratio, resolution and description of how the Pana adjusts incoming signal to use the 5120x2160 resolution 21:9 aspect ratio.

- **1:1**

Displays the signal without scaling and centers it on the Pana screen. Lower resolution sources will be centered horizontally and vertically on the screen and be letter boxed (black bars on top and bottom, or both sides) or window boxed (black bars on all four sides). The size of the picture is determined by pixel to pixel from input source to display view. In other words UHD which is 3840x2160 will be centered horizontally on 5120x2160 (3840 on 5120 width), but the height (2160 pixels) is the same; there will be black boxes on the sides, but not on the top or bottom.

- **H Stretch**

Stretches the input source horizontally until the image reaches the edge of the screen. Depending on incoming resolution, images will appear wider than the initial image, so round incoming shapes appear as ovals.


- **H/V Stretch**

Stretches the incoming signal both horizontally and vertically until the image reaches the edge of the screen. With H/V Stretch none of the image is lost. It will either be stretched or scaled. If the incoming source is 21:9, the same aspect ratio as the Pana, there will be no distortion.

- For lower resolution 21:9 signals, such as 2560x1080, 3440 x1440 or 3840x1620, this setting will scale the image perfectly with no shape distortion.
- If the incoming source is not the 21:9 aspect ratio the image will be distorted.
- For 16:9 incoming signals there is a 33.33% horizontal stretch so circles will become ellipses.
- A special case is 21:9 movies playing in a 16:9 frame. In this case the original horizontal black bars will remain visible because the black bars are in the source video and none of the source video image is lost. For more information see [Section 3.7, Aspect Ratio on page 30](#).


<p>Aspect Ratio (continued)</p>	<ul style="list-style-type: none"> • 16:9 Puts the incoming source into a UHD 16:9 frame Scales incoming FHD and HD signals which are 16:9 ratio to UHD so the 16:9 aspect ratio is preserved. Incoming source providing 1920x1080 or 1280x720 to the Pana will be scaled to 3840x2160 so it is presented at full height with vertical black bars, just as a 3840x2160 in 1:1 mode. Note that with this aspect ratio mode even if the incoming signal is the native 5120x2160 the Pana electronics will squeeze the signal into a 3840x2160 16:9 frame with vertical black bars so circles will look like ellipses. See Section 3.7, Aspect Ratio on page 30 for visual representation of common aspect ratios. <hr/> <p>NOTE: Aspect Ratio is associated with input source. If you change Aspect Ratio for one input source, say HDMI, it will not change the Aspect Ratio for other input sources such as DP. Aspect Ratio will stay with that input source until changed.</p>
<p>Brightness</p>	<p>Adjusts the backlight intensity. Does not affect any video levels Range from 0-100</p>
<p>Contrast</p>	<p>Adjusts the video settings of the Pana decoders for white level details. Jupiter highly recommends to leave this setting at its factory default as increasing it may make white shirts lose all level of detail and appear flat. Range from 0-100</p>
<p>Sharpness</p>	<p>Adds enhancement to edges by adding a thin white border on high contrast transitions which makes the image appear sharper. Range from 1-4</p>

3.2.4 Colour

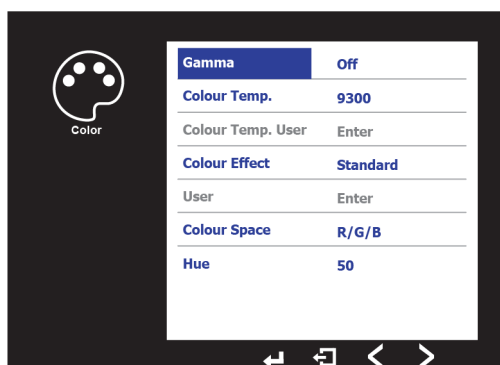


Gamma	Adjusts the non linear response of the overall brightness to optimize the image based on how it was captured. 2.2 is typical. Options are Off, 1.8, 2.0, 2.2, 2.4. Off is the lowest setting, 2.4 is the highest setting.
Colour Temperature	Adjusts how warm (reddish) or how cool (bluish) the picture appears. Options are 12000, 9300, 6500, 5800, 3200, User, with 12000 for the coolest (bluish) and 3200, the reddest. User provides more options to set colour temperature.
Colour Temp User	Provides more options to set colour temperature. Adjusts 0-256 range for Red and Blue.
Colour Effect	Factory defined presets for optimized display settings based on usage mode. Standard is good for many types of usage. Others are best for the usage defined by the name. For example best defined setting for Games is Game, for Movies is Movie. For more user defined options, select User and modify the setting is User colour Effect.
User (Colour Effect User)	When the colour effect is in the custom mode, you can adjust the hue and saturation of R/Y/G.
Colour Space	Rarely used setting that is intended to resolve colour issues if a source does not correctly communicate the correct colour mode to the display. If the display has a significant purple or green cast to it, switching this setting would likely correct the issue Defines the colour encoding system used to describe colours. The options are RGB and YUV. These setting define the coding for the colour space.
Hue	Hue controls the application of colour as on a colour wheel. Shifting the hue from red to green means that you are also shifting green to blue and yellow to cyan.
Saturation	Intensity of the colour. The amount of white light mixed in with a hue. By decreasing the saturation, the intensity of the colour will decrease until you are left with a black and white image. by increasing, the colors will be more vibrant.

3.2.5 Audio

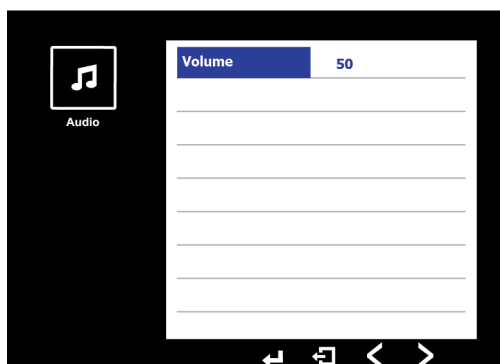

Audio sets the volume of the speakers and the output on the audio (HEADPHONE) jack. Volume + and - raise and lower the volume.


3.2.6 Advanced

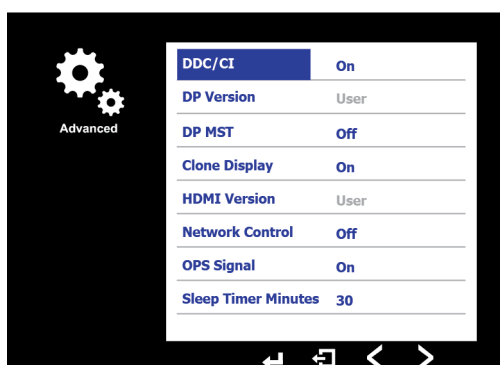


<p>DD/CCI</p>	<p>Display Data Channel (DDC) / Command Interface (CI) is a collection of protocols which facilitate display-related transmissions. DDC/CI can help control multiple monitors from different manufacturers.</p>
<p>DP Version</p>	<p>Limits the input from the maximum of the interface; for the Pana, the maximum the interface supports is DP 1.4. USB-C, DP, and OPS use DisplayPort standards.</p> <ul style="list-style-type: none"> • 1.1 Supports maximum resolution of 2560 x1080/25 • 1.2 Supports maximum resolution of 3840x2160/4K • 1.4 Supports maximum resolution of 5120x2160+/5K+

DP MST	<ul style="list-style-type: none"> • Provides for multiple monitors to be daisy chained via the DP OUT connector. Tested for two monitors. • DP MST ON and Clone Display OFF extends the desktop across multiple screens. See Figure 3.2, DP MST and Clone Display Options. • The DP MST Extend feature requires a DP or USB-C input to the main Pana and is limited to providing a maximum of 3840x2160@30Hz to the extended daisy chained Pana (or other display). For example, when the main Pana is driven with 5K60 from a laptop over USB-C, the daisy chained Pana will show up as an extended monitor in the Windows Display Settings of the source laptop. The maximum selectable resolution is 3840x2160@30Hz. With 3840x1620 resolution, the maximum refresh rate is 30 Hz. Only 3440x1440 provides a refresh rate of 60 Hz for the extended Pana
Clone Display	<ul style="list-style-type: none"> • DP MST ON and Clone Display ON duplicates the image on the primary Pana to one or more monitors via the DP OUT connection. Retains the resolution for multiple monitors. Tested for two monitors connected to the primary monitor. • Clones ANY input to the primary PANA, be it OPS, HDMI, DP or USB-C, to daisy chained Panas. See Figure 3.2, DP MST and Clone Display Options.
HDMI Version	<p>Limits the input from the maximum of the interface; for the Pana, the maximum the interface supports is HDMI 2.0.</p> <ul style="list-style-type: none"> • 1.4: Supports maximum resolution of 2560 x1080/25 • 2.0: Supports maximum resolution of 3840x2160/4K
Network Control	<ul style="list-style-type: none"> • On: Enables serial RS232 and IP based network control • Off: Disables serial RS232 and IP based network control
OPS Signal	<p>If OPS is not in use, this setting must be set to Off.</p> <ul style="list-style-type: none"> • On: Uses OPS. Connected to display • Off: Does not use OPS
Sleep Timer Minutes	<p>Sets the number of minutes until the monitor “sleeps.” The screen will be turned off in sleep/standby mode. Using the Power/Standby button on the remote will wake the screen. Range 0-120. Adjusts by minutes. 0 means the monitor will not go to sleep.</p>

Figure 3.2: DP MST and Clone Display Options

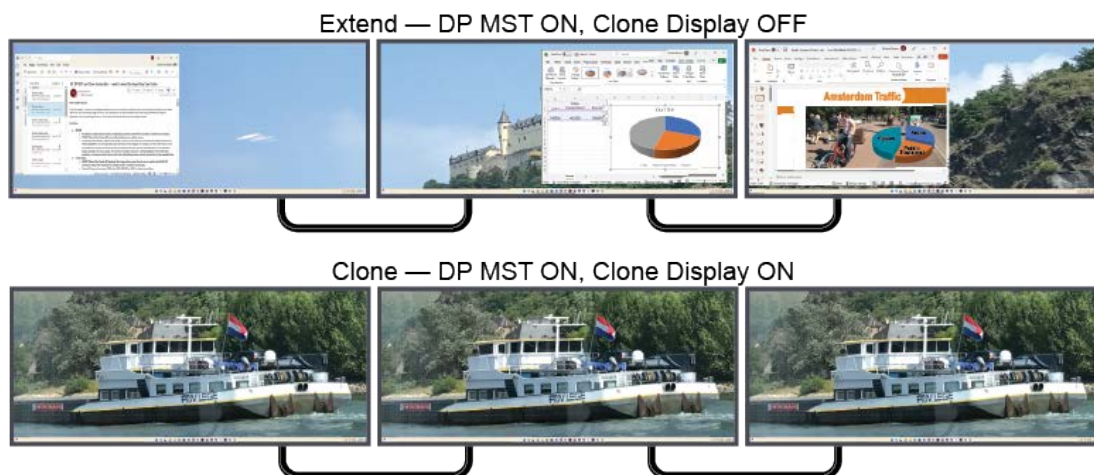

3.2.7 Other

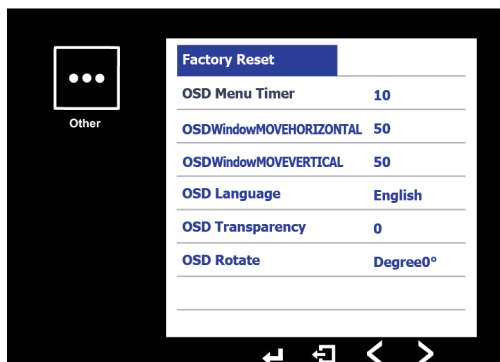

Factory Reset	Returns to the factory settings.
OSD Menu Timer	Amount of time (in seconds) which the menu will stay open
OSDWindow MOVE HORIZONTAL	Adjusts the horizontal position of the On Screen Display (OSD) window. The OSD window is the window in which the menu items and configuration parameters reside. Using the + and - buttons for volume control moves the window back and forth.
OSDWindow MOVE VERTICAL	Adjusts the vertical position of the OSD window. Using the + and - buttons for volume control moves the window up and down.
OSD Language	Select Language from the list
OSD Transparency	Adjusts the transparency of the On Screen Display (OSD) window
OSD Rotate	Rotates the OSD window for orientation of the display 90, 180 or 270 degrees so the writing in the OSD window and menus can be read upright, depending on the orientation of the mounting of the display.

3.3 Input Capabilities and Cabling Considerations


In order to support a 5K resolution of 5120 x 2160 @ 60Hz, cabling must be DisplayPort 1.4 or better. When possible look for DP8K certification on cables to ensure compatibility.



3.4 Touch and Touchback


The touchback port is a port which carries touch information from the display itself including the touch information, along with any other data from the USB connections for the display. It is how the source computer mirrors the Pana display screen.

Figure 3.3: Generic View of Touchback for the Pana T models

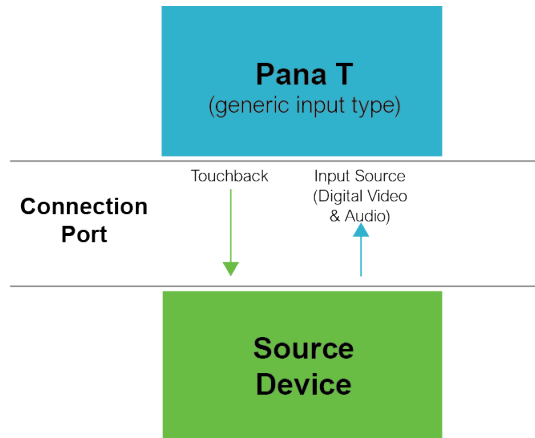

Touchback is related to the input type, which is why there is a touchback port for DP and HDMI. The touchback for USB-C is the USB-C port and will work with a USB-C hub.

Figure 3.4: View of Touchback by Input Type

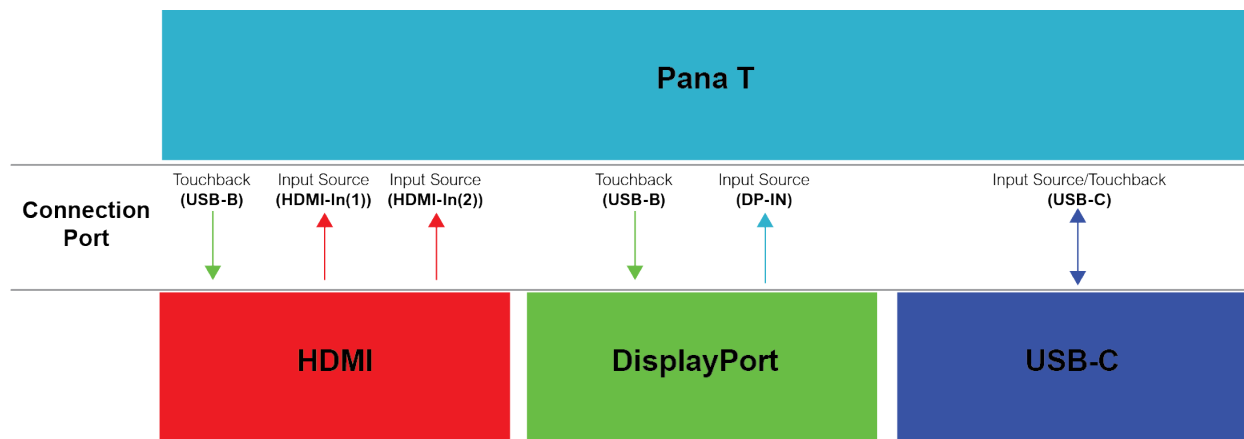

For the Pana 105T there are variations from the simple touchback loop shown in [Figure 3.3](#):

- HDMI has two HDMI 2.0 ports. HDMI(1) and HDMI(2)
- DisplayPort follows the generic touchback back model as described above
- USB-C is bi-directional, so there is no separate touchback port

3.5 Touch Screen

Touch screen interaction settings are provided by the computer operating system for Windows (Pen and Windows Ink in Device control panel) and 3rd party applications for Mac OS, Linux and Android systems.

3.6 Image Retention and Burn-In

3.6.1 Issue

Image retention and image burn-in are well known issues associated with many display technologies. Image retention and eventually burn-in comes about when a static image is present on the screen for an extended period of time, i.e. days and/or weeks. Jupiter has made every effort to make its Pana product line resistant to these issues but if a static image/logo is left on a Pana 24/7 for weeks at a time there's bound to be some image retention of the displayed image.

Note that high contrast static images, such white text over black background, are the most prone in causing image retention. News channels which have a logo in the same place on the screen while the rest of the screen image changes often cause image retention from the logo.

Panas use LCD technology which is more resistant to image retention and burn in than some other display technologies.

The Jupiter warranty does not cover image burn-in.

3.6.2 Recommendations

Jupiter recommends the use of a screen saver during off hours and weekends if the Pana is left on 24/7 to prevent image retention.

In the special case of a Pana being used in a Microsoft Teams Rooms (MTR) deployment where no screen saver is available, Jupiter recommends following Microsoft's guidelines. Specifically, Microsoft recommends going into the Admin Windows account of the MTR PC and then changing the Power Plan settings under Control Panel to turn the Display off after 5 minutes of inactivity as detected by the room motion sensors on the Logitech/Lenovo Tap touch controller which comes with the MTR kit. Both of these steps will prevent image retention from occurring and are considered MTR best practices.

3.6.3 Resolutions

Running a video on a loop or engaging a screen saver overnight may resolve image retention in many cases. Repeating the process will help in more extreme cases. However when the image is really "burned-in" the burned-in image is not reversible.

3.7 Aspect Ratio

The most common broadcast aspect ratios currently are 16:9 with UHD and FHD resolutions. These 16:9 aspect ratios can be visualized as 16 squares wide and 9 squares tall.

For discussion's sake aspect ratio refers to the resolution of the incoming signal from a source. For example, Broadcast/TV signals are typically 3840x2160 (UHD), 1920x1080 (FHD) or 1280x720 (HD); the ratio of signal width over signal height reduces to 16:9 (for example $3840 \div 240 = 16$, $2160 \div 240 = 9$; $1280 \div 80 = 16$, $720 \div 80 = 9$).


Signals from a Windows or MacOS PC to a monitor can have a lot more options. Which resolutions appear on PC source (in Windows Display Setting or System Settings Display on MacOS) are drawn from what is declared in the Pana monitor EDID tables. Should the desired resolutions not show up in the display settings, contact Jupiter Support.

In addition to the most common aspect ratio of 16:9 there are also 640x480 (SD) 4:3 signals from the era of analog TV and the 2.37:1 aspect ratio cinematic standard for ultrawide/cinemascope movies. 2.37:1 is approximately 21.3:9, so very close to the Pana's 21:9 ratio.

The native resolution of the Pana is 5120x2160. The aspect ratio of the Pana is 21:9.


[Figure 3.5. Resolutions/Aspect Ratios with Same Pixel Pitch](#) shows a comparison of the resolutions described in this discussion with the Pixel Pitch (that is the Pixels are the same size and same distance between pixels) to give a sense of the difference among the resolutions.

Figure 3.5: Resolutions/Aspect Ratios with Same Pixel Pitch

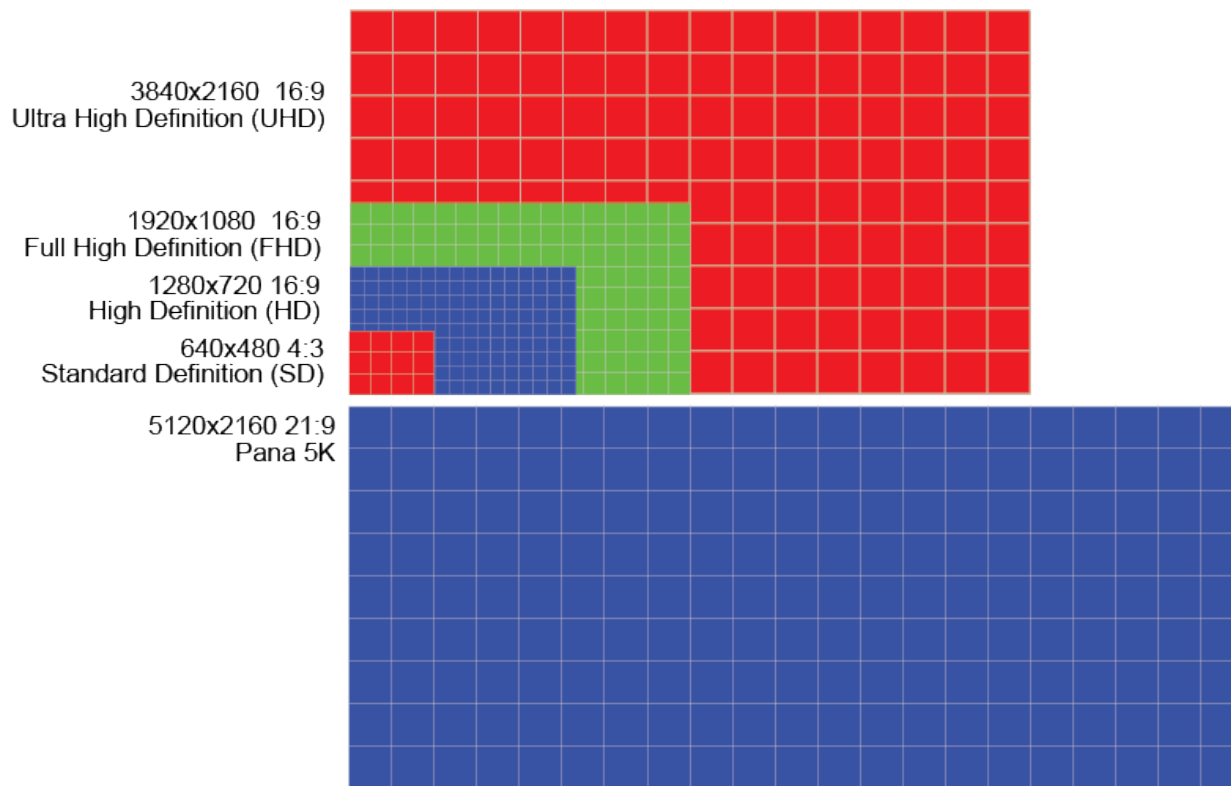

Please see [Figure 3.7. Aspect Ratio options based on Source Content Aspect Ratio and Resolution](#) on page 32 for a visual representation of the selections in **Picture|Aspect Ratio**.

Figure 3.6: Geometric Representation of 1:1, H Stretch and H/V Stretch Options

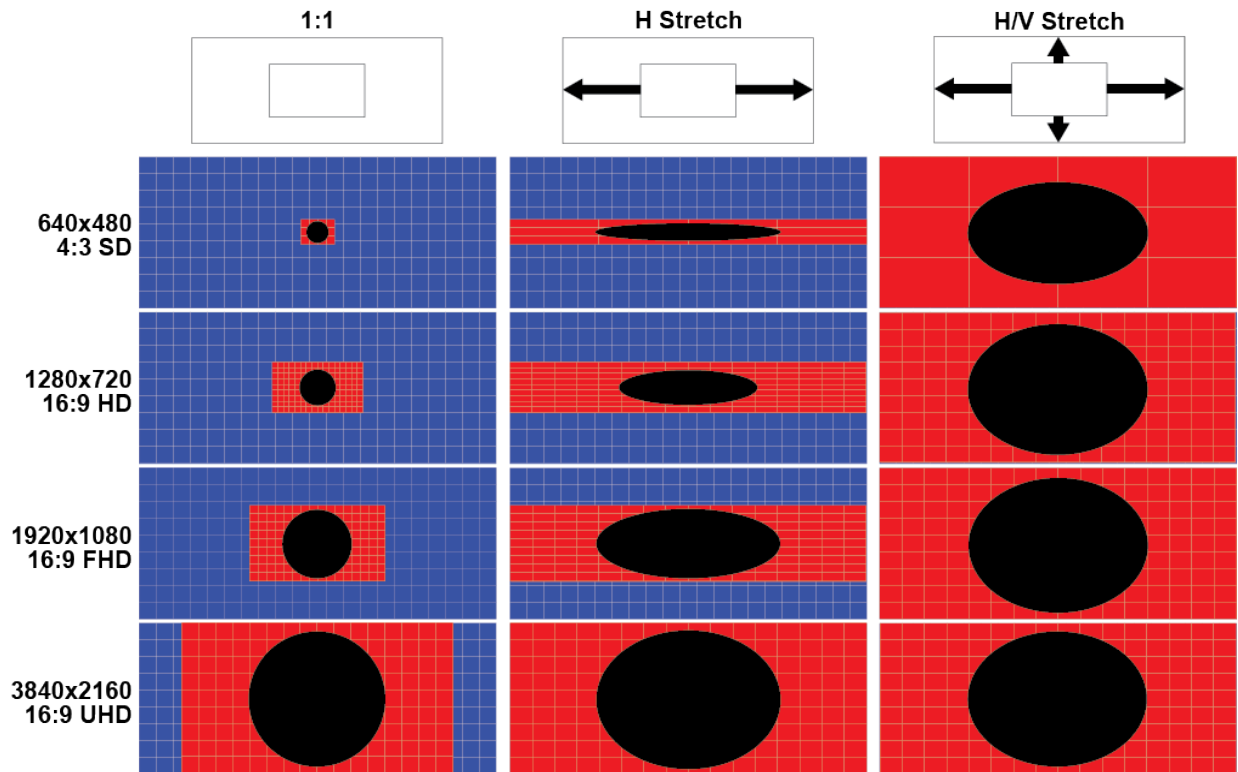

The aspect ratio options in the **Picture** menu item:

- **1:1**
Uses the aspect ratio of the input source without modification. The image is centered vertically and horizontally on the screen.
- **Lower resolution 21:9 (2K, 2560x1080)**
A lower resolution 2560x1080 21:9 source will be centered horizontally and vertically on the screen. Because the Pana supports 5120x2160 resolution this lower resolution image will be window boxed (black boxing around the image).
- **Higher resolution 16:9 (UHD, 3840x2160; Cinema 4K, 4096x2160)**
3840x2160 or 4096x2160 16:9 images will be letter boxed on the sides on the Pana's 5120x2160 because the 16:9 images are the same height but narrower.
- **H Stretch**
Stretches the input source horizontally to the limits of the screen.
 - **Lower resolution 4:3 and 16:9**
The horizontal only stretch on these lower resolution input source have quite dramatic affect on the source image.
 - **Higher resolution 16:9 (UHD, 3840x2160; Cinema 4K, 4096x2160)**
Stretches the input source horizontally. Circles become ovals.
 - **Lower resolution 21:9 (not shown)**
A 2560x1080 21:9 source will be letterboxed (black boxing at the top and bottom) because it is keeping the vertical size and only stretching the horizontal.

H/V Stretch

Stretches the input source both horizontally and vertically until one coordinate is limited by the screen. In the 16:9 to 21:9 stretch, the horizontal limits the stretch, so there is letterboxing at the top and bottom. There is no cropping.

Lower resolution 21:9 (2K, 2560x1080, not shown)

A lower resolution 2560x1080 21:9 source will fill the screen with no loss of image because it is a smaller image with the same aspect ratio scaled up. Lower resolution image may not be clear.


Lower resolution 16:9 (2K, 2560x1440)

A 2560x1440 16:9 2K image will be scaled up (stretched both horizontally and vertically. In other words the 16:9 H/V Stretch will fill the screen, but with distortion. Circles will appear as ellipses. Lower resolution images may not be clear.

Higher resolution 16:9 (UHD, 3840x2160; Cinema 4K, 4096x2160)

UHD and Cinema 4K will be stretched horizontally only since 2160 is already the same height as 5120x2160. The UHD image will be stretched a third horizontally and a Cinema 4K stretched a quarter horizontally to reach the edges of the 5120 Pana screen. There are no black bars at top and bottom.

Figure 3.7: Aspect Ratio options based on Source Content Aspect Ratio and Resolution

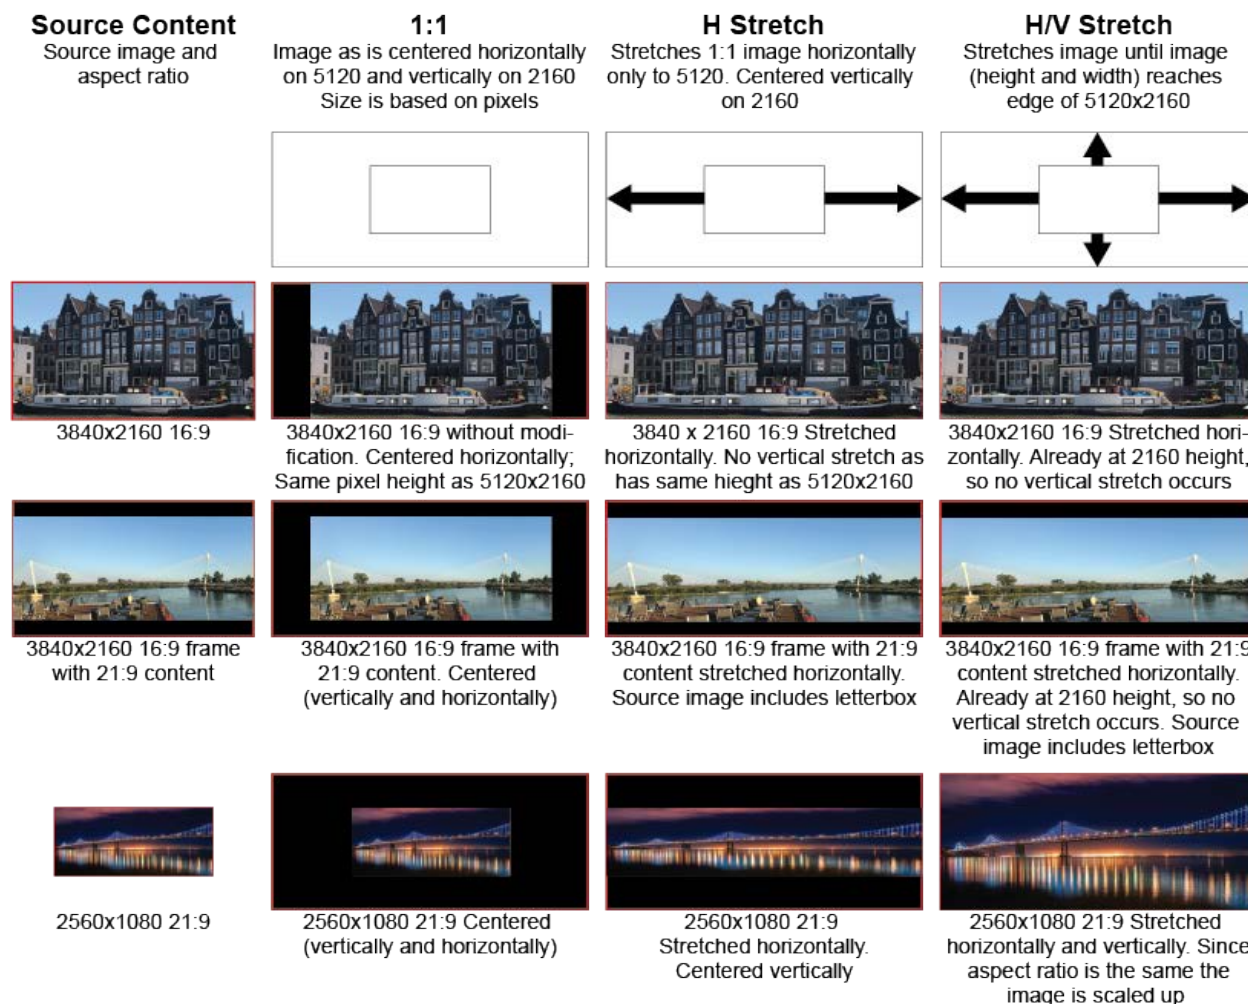

- **16:9**

Puts the incoming source into a UHD 16:9 frame

- **Higher resolution 16:9 (UHD, 3840x2160; Cinema 4K, 4096x2160)**

UHD input is the same as frame so image is like 1:1 as the 16:9 frame is the same as the incoming source signal. 4K is usually synonymous with UHD, however in the cinematic market 4K refers to 4096x2160 so it is a wider image that will be reduced horizontally.


- **Lower resolution 16:9 FHD and HD**

Scales incoming FHD and HD signals which are 16:9 ratio to UHD so the 16:9 aspect ratio is preserved. Incoming source providing 1920x1080 or 1280x720 to the Pana will be scaled to 3840x2160 so it is presented at full height with vertical black bars, just as a 3840x2160 in 1:1 mode. Lower resolution image may not be clear.

- **21:9 aspect ratio source**

Note that with this aspect ratio mode even if the incoming signal is the native 5120x2160 the Pana electronics will squeeze the signal into a 3840x2160 16:9 frame with vertical black bars so circles will look like ellipses. Lower resolution 21:9 input sources will be scaled and squished, so they fill the 16:9 frame just as the higher resolution 5K 21:9 source.

Figure 3.8: 16:9 UHD With FD, HD, and 5120x2160 Source Inputs

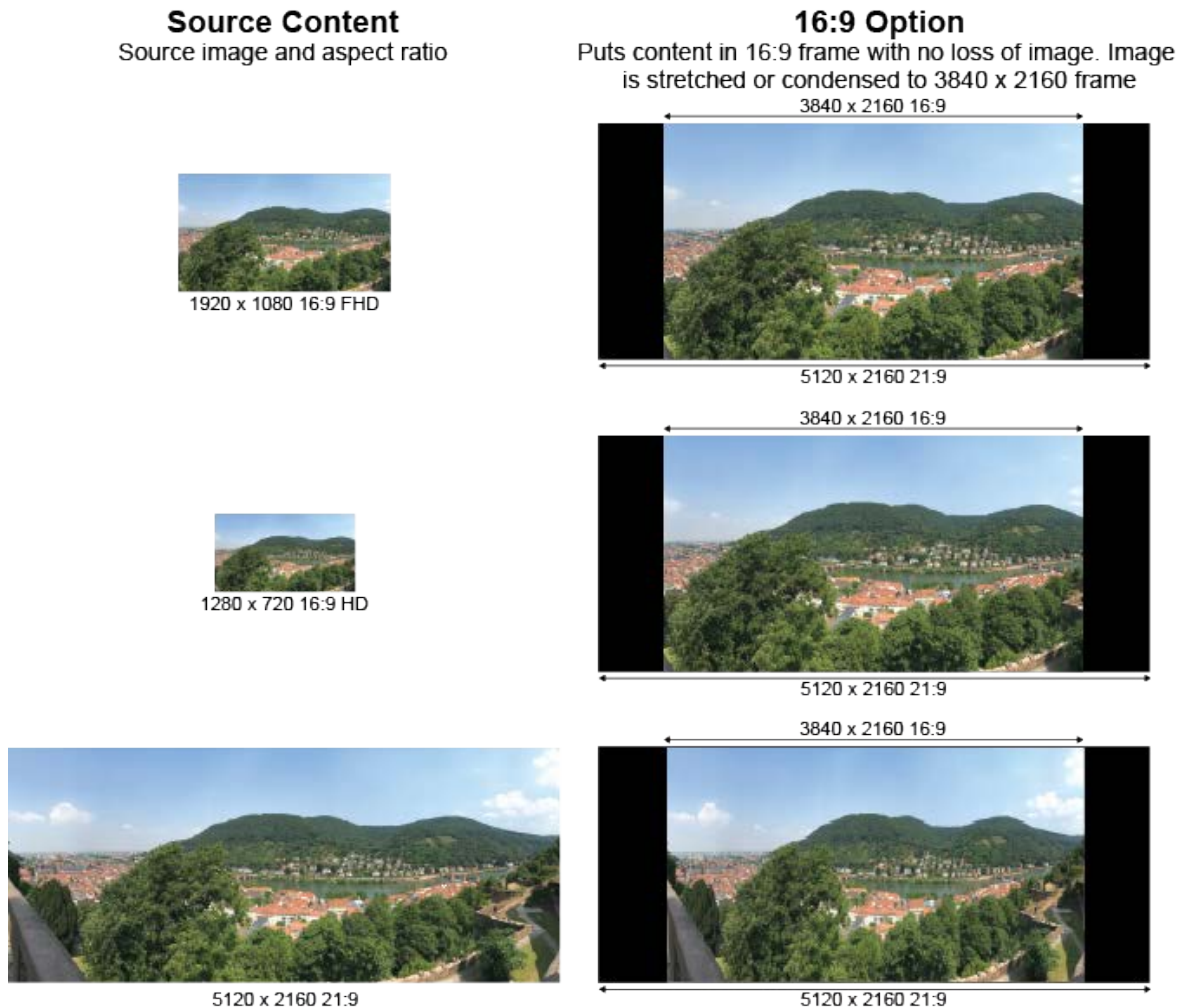

This page has been intentionally left blank



Chapter 4

PANA 105T INSTALLATION

4.1 Installation Location

- Safe product operating range is from 0° C to 40° C. (32F - 104F)
- Do not install near heat sources such as radiators, heat registers, stoves, or other apparatus which produce heat
- This product is not rated for use at altitudes exceeding 5000 meters (roughly 16,400 feet or 3.1 miles)

4.2 Electrical Precautions


- Do not overload outlets or cables beyond electrical capacity
- Do not insert the power plug into an outlet other than 100-240V AC. Insertion into any other rated outlet may cause fire or electrical shock
- Use the appropriate grounded outlet for the supplied power cord. Using other outlets, power cords, or adapters may cause fire or electrical shock

4.3 Mounting Considerations

- Consult your preferred mount manufacturers for a solutions for a display with a 1500x600mm mount pattern that weighs 214 pounds (97+Kg)
- Follow all local codes and regulations.
- Ensure that the wall has the structural integrity to hold the display when the wall mount is properly attached
- Ensure that the wall anchors (bolts, screws, etc) are rated to hold at least twice the weight of the display (2x amount)
- Use UL approved mounting systems which are rated to hold at least the weight of the display.
- Follow the instruction manual from the manufacturer of the mount system
- If a custom mounting solution is necessary consult a professional engineer

4.4 Mounting Dimensions

The mounting holes on the back of the display are 1500 mm by 600 mm.

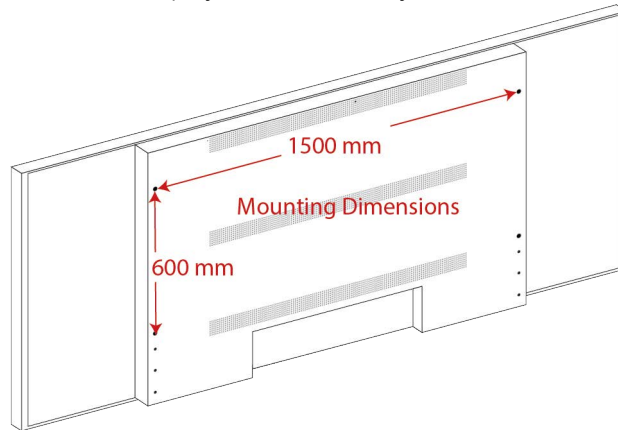



Chapter 5

PANA 105T WARRANTY & SUPPORT

This chapter provides Customer Support and warranty information:

- See [Customer Support](#) for information about technical questions, guidance and contact information
- See [Warranty on page 38](#) for information about the warranty for your Pana 105T

5.1 Customer Support

5.1.1 Hardware Faults

If you require assistance with any suspected hardware fault, please contact the vendor from whom you purchased the display while within the full warranty period for the display.

5.1.2 Technical Assistance

If you require technical assistance, please contact Jupiter Systems' technical support team. Please provide as much information to the support team about the fault and any steps you have taken in trying to resolve the issue.

5.1.3 Contact Information

- Website
[www.jupiter.com /support](http://www.jupiter.com/support)
- Phone
1-510-675-1000
- Email
support@jupiter.com
- Mail (physical)
ATTN: Technical Support
Jupiter Systems
31015 Huntwood Avenue
Hayward, CA 94544-7007

5.2 Warranty

5.2.1 Warranty Period

The Pana screens are a commercial grade LCD with an expected lifetime of 100K when their operating conditions are met and the panels are operated no more than 16 hours per day, 7 days a week.

Should your Jupiter Commercial LCD Monitor (“Product”) fail due to a defect in materials or workmanship under normal and proper use, during the warranty period set forth below, Jupiter Systems (“Jupiter”) will, at its option, repair or replace the Product. This limited warranty is valid only to the original retail purchaser of the Product.

5.2.2 Limited Warranty

Parts*: 3 Years
Back Light: 3 Years
Labor: 3 Years

* Internal/functional parts only

Replacement products and parts are warranted for the remaining portion of the original warranty period or ninety (90) days, whichever is greater.

Replacement products and parts may be new, reconditioned, refurbished, or otherwise factory remanufactured.

Replaced product or part(s) will be the property of Jupiter.

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THE PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE LIMITED WARRANTY. UNDER NO CIRCUMSTANCES SHALL JUPITER OR ITS DISTRIBUTORS / DEALERS BE LIABLE FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST GOODWILL, LOST REVENUES OR PROFITS, WORK STOPPAGE IMPAIRMENT OF OTHER GOODS, COST OF REMOVAL AND REINSTALLATION OF THE PRODUCT, LOSS OF USE, OR ANY OTHER DAMAGES WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE.

JUPITER'S TOTAL LIABILITY, IF ANY, SHALL NOT EXCEED THE PURCHASE PRICE PAID BY YOU FOR THE PRODUCT.

Some regions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This limited warranty gives you specific legal rights and you may also have other rights that vary from region to region.

5.2.3 Warranty Limitations

Product Warranty does not cover:

- Damage caused by natural disaster, fire, acts by third parties, accidents, owner's intentional misuse and fault, or use in other improper conditions
- Incidental damages (such as profit loss or interruption in business, modification, or erasure of record data, etc.) caused by use or inability to use this product
- Damage caused by inappropriate operation, or from not following the user manual.
- Damage caused by misuse or malfunction through simultaneous use of this product and the connected equipment or software
- Damage caused by neglect of the instructions described about installation.
- Damage caused by improper installation
- Damage caused by disassembly, modification or repair by non-authorized service center or people

This Limited Warranty does not cover:

- Service trips to deliver, pick up, install, educate how to operate, replace fuses, correct wiring, or correct unauthorized repairs and the removal and reinstallation of the Product for repair
- Damage or defects of the Product caused by transportation and/or handling, including scratches, dents, chips, and/or other damage to the finish of your Product, unless such damage results from defects in materials or workmanship and is reported within one (1) week of delivery
- Image burn-in
- Minor imperfections within design specifications that do not materially alter or affect functionality
- Damage or defects of the Product caused by installation or repair of antenna systems, cable converters, other equipment supplied by cable company, or other components in a video system
- Damage or defects of the Product caused by unauthorized alteration, modification or incorporation into any other product or system components, or if it is used for other than the intended purpose
- Damage or defects of the Product caused by improper set-up or adjustment on consumer controls
- Damage or defects of Product caused by incorrect electrical current or voltage, power failures, interruptions, or inadequate electrical service, including incorrect or insufficient AC supply
- Damage or defects of the Product resulting from operation of the Product contrary to the Product owner's manual and/or installation manual
- Damage or defects of the Product resulting from misuse, abuse, improper installation/repair/maintenance
- Damage or defects of the Product caused by accidents, pests and vermin, lightning, wind, fire, flood, or other acts of God
- Damage or defects of the Product caused by the use of accessories, parts, consumable cleaning products, or service not provided or approved by Jupiter. Damage or defects of the Product or missing items to any Product sold "As Is", "With all Faults" or similar disclaimer
- Products with original serial numbers that have been removed, altered, or cannot be readily determined
- Increases in utility cost and additional utility expenses
- Replacement of any consumable parts, including batteries on the remote control

The cost of repair or replacement under the above excluded circumstances shall be borne by the customer.

5.2.4 How Service is Handled

- The original sales receipt specifying the Product and date of purchase is required to obtain warranty service.
- Under some circumstances, you may be asked to provide credit card information for a non-warranty service fee, as a deposit for advanced shipment, or cost of unreturned loaner product.
- To ensure proper credit and avoid unnecessary charges, you must obtain a return authorization before returning any product to Jupiter.
- In the event a replacement product is received, please use the original carton / packaging from that replacement product in returning the defective unit to Jupiter.
- Jupiter shall bear the cost of out-bound shipping under this limited warranty.

5.2.5 Additional Information Concerning Warranty Service

To obtain warranty service and additional information:

- Phone:
North America: (510) 675-1000 and select the appropriate option from the menu.
- Visit our website:
<http://www.jupiter.com>
- Mail:
ATTN: Display Warranty
Jupiter Systems
31015 Huntwood Avenue
Hayward, CA 94544-7007

5.2.6 Pixel Functionality

Your Product's display contains many individual pixels, and typically a small number of pixels do not function normally. Your display has been inspected and is in compliance with Jupiter's specifications, and any pixel non-functionality does not affect the operation or use of your Product's display.

Index

Numerics

1 to 1 Aspect Ratio setting 31

A

Aspect Ratio 12, 22, 30

Audio 25

B

Back-light 12

Brightness 12, 23

Buttons 8, 19

C

Cabling Considerations 27

Certifications 17

Clone Display 26

Color Gamut 12

Colour Effect 24

Colour Effect User 24

Colour Space 24

Colour Temp User 24

Colour Temperature 24

Connector Specifications 14

Connectors 10

Contact Information 37

Contrast 12, 23

Customer Support 37

D

DD/CCI 25

Depth 16

Dimensions 16

Dimensions, Shipping 17

Display Dimension 12

Disposal of Product 5

DP IN 14

DP MST 26

DP OUT 14

DP TOUCH-USB 14

DP Version 25

E

Electrical Precautions 35

Environmental Considerations 17

Environmental Specifications 17

F

Factory Reset 27

G

Gamma 24

H

H Stretch 31

H/V Stretch 32

HDMI IN 14

HDMI TOUCH-USB 14

HDMI Version 26

HEADPHONE 14

Height 16

Horizontal Frequency 12

Hue 24

Humidity, Operating 17

I

Input 21

Input Capabilities 27

Input Sources 20

Inspection Procedure 3

Installation Location 35

Interface Specifications 14

IP based network control 26

M

Maximum Display Frequency 12

Menus/Settings 21
Minimum Touch Diameter 13
Mounting Characteristics 16
Mounting characteristics 16
Mounting Considerations 35
Mounting Dimensions 36

N

NETWORK 14
Network Control 26

O

Operating Temperature 17
Operation 19
OPS Signal 26
OPS slot 14
OPTICAL 14
OSD Language 27
OSD Menu Timer 27
OSD Rotate 27
OSD Transparency 27
OSDWindow MOVE HORIZONTAL 27

P

Packaging 17
Panel Surface 13
Physical dimensions 16
Physical Specifications 16
Pixel Pitch 13
Positioning Accuracy 13
Power 14
Power Switch 20
Preset Modes 13

R

Remote 19
Remote Control 8
 bright sunlight 9
 clear path between the remote control and the
 Remote Sensor window 9
 fluorescent lighting 9

Resolution 12
Response Time 13
RS 232 14

S

Saturation 24
Screen Specifications 12
serial RS232 26
Sharpness 23
Shipment Monitors 3
Shipment Monitors Triggered 3
Sleep Timer Minutes 26
Speakers 11
Specifications 12
Storage Considerations 5

T

Technical Assistance 37
Touch Depth 13
Touch Point 13
Touch Screen 29
Touch Screen, Using 29
Touch Specifications 13
Touch Type 13
Touchback 28
Touchback by Input Type 28

U

Unpack the Pana 34 4
USB-C 14

V

Vertical Frequency 12
Viewing Angle 13

W

Weight 16
Weight, Shipping 17
Width 16